

# Content


Getting ready for use.....	1
Part name and function .....	1
Inserting the USIM/SIM card.....	3
Inserting SD card .....	4
Installing the battery .....	4
Removing the battery .....	5
Charging the battery.....	5
Battery performance.....	6
Turning your phone on and off.....	7
Desktop manager.....	8
Making a call.....	10
Main Function .....	11
Alarms .....	11

Browser .....	12
Calculator.....	12
Calendar .....	13
Call log.....	13
Camera.....	14
Contacts.....	14
Downloads .....	15
Email .....	15
Firewall .....	16
FM Radio .....	16
Gallery .....	16
Messaging .....	16
Music .....	17
My files .....	18
Note pad .....	18
Phone .....	19

Recorder.....	19
Settings.....	20
Stopwatch .....	24
Voice Dialer.....	25
Voice search .....	25
World time.....	25
Safety information .....	26
Warranty Terms and Conditions:	<b>Error! Bookmark not defined.</b>

# Getting ready for use

## Part name and function

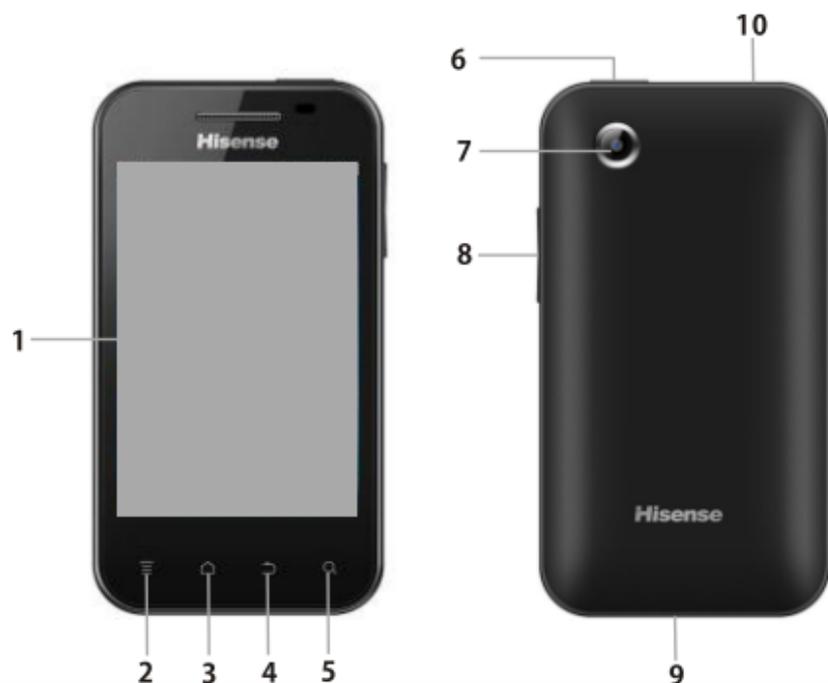

	Name	Function
1	MultiTouch	Quick and easy operation.
2	Menu key	Press to present a main menu.
3	Home key	Press to return to home screen.

4	Return key	Return to previous menu.
5	Fast search key	Enter Google search interface.
6	Power key	When powered on press to darken or lighten the screen or hold to pop up option menu. When powered off hold to turn on the phone.
7	Camera	Take pictures.
8	Volume keys	Press to accommodate the volume and start up silence mode when there is an incoming call.
9	USB port	Insert data cable.
10	Earphone jack	Insert earphone.

## Inserting the USIM/SIM card

Your phone must work with a card provided by your service provider. Your card contains all your subscription information.

Insert USIM/SIM card with the metal contacts facing down and the cut corner aligned with that of the slot.

### Notes:

1. If no card is installed, or there are errors in the insertion, or your card is damaged, the string of "Please insert a sim card" will display on the screen after your phone is powered on.
2. If your card is PIN-locked your phone will display "unlock PIN". You must enter PIN before the phone can start working. Please contact your network service provider if you need.
3. When inserting card, please

keep it away from possible damage caused by static, scratch and bend, and put it where is not available for children.

## **Inserting SD card**

Insert SD card with the metal contacts facing down and the cut corner aligned with that of the slot;

## **Installing the battery**

You must install and charge the battery to use your phone. Insert the ridge at the top of the battery into the base of the phone, make sure to touch the metal contact on the phone, then push the battery down and snap it into place.

### **Note:**

Your phone is designed to be used only with original batteries and

chargers. Use of other batteries or chargers may cause damage to your phone and the warranty will be void.

## **Removing the battery**

Make sure your phone is powered off to avoid the important information getting lost.

Hold battery bottom and remove the battery from the phone.

## **Charging the battery**

New batteries are shipped partially charged. Before you can use your phone, you need to charge the battery. Some batteries will have best performance after several full charge/discharge cycles.

1. Connect data cable and charger, plug one end into your phone's data port.
2. Plug the other end of the charger

into the appropriate electrical outlet (100~240V AC).

3. When your phone indicates that the battery is fully charged, remove the charger.

### Notes:

1. Before charge, make sure the battery is installed in the phone.
2. You need longer charging period with the lower voltage.
3. You need longer time as operation as charging.
4. The normal charge temperature is during 0°C-40°C.

## Battery performance

	1630mAh (standard battery)
Standby time*	120hours
Talk time*	300 minutes

- Many conditions can affect

battery's standby time, such as local network conditions, phone's settings, frequent operations, using data services, etc.

- The battery performance is also affected by charge state and temperature.

## **The special explanation about single-pass dual card dual standby use**

You can't use two cards talking or net playing at the same time when your phone inserted two cards. If one card is talking or net playing, the other card must turn off the network.

## **Basic operations**

### **Turning your phone on and off**

Turn on the phone: Press and hold Power key for more than 3 seconds to turn on your phone.

Turn off the phone: Press and hold Power key to pop up option menu, select “power off”. If it is powered off you can not receive, make a call or do other operations.

## **Desktop manager**

### **Lock the screen**

The screen lock prevents unwanted actions on the touch screen when you are not using your phone. When the phone is left idle for a set period, the screen locks automatically if you enabled screen lock in settings → location and security.

### **Unlock the screen**

You can unlock the screen according to your settings.

The default way is pulling  to right after your screen is enabled with pressing power key.

### **Add icon:**

Press and hold a selected icon on

main interface and drag it to desktop after you feel it vibrating. Put it where you intend to, then you can release it.

### **Delete icon:**

Press and hold a selected icon on desktop, you will find a recycle bin icon appearing after you feel it vibrating. At this time drag the icon to recycle bin, then release.

### **Status bar**

A status bar at the top of the screen displays phone status information and notifications.

### **Add or delete widgets and change wallpaper**

Press on the desktop space, then pop up the following menu: shortcuts/ widgets/ folders/ wallpapers.

### **Notification panel**

You can open notifications such as unread messages or missed calls

directly from the notification panel.

How to open the panel:

Hold the status bars with your finger, and drag it downwards.

## **Making a call**

Click to enter dialer interface on idle screen or main menu screen, input phone number and click  to make a call, click the End button key to end a call. If you make a mistake, you can

click  to delete the number or hold it to delete all numbers before the cursor.

# Main Function

## Alarms

You can see three default alarm clock when enter.

Enter one of them, turn on the alarm:

1. Turn on the alarm.
2. Set the time.
3. Set the repeat times.
4. Set the ringtone.
5. Choose vibrate mode or not.
6. Edit label.
7. Click Done at the bottom of the screen.

### Notes :

1. Press menu key to add more alarm when enter alarm clock.
2. The alarm clock will still work even the phone is powered off.
3. Don't set the phone in silence mode to guarantee the alarming effect.
4. Please change the battery in a

minute or else the information stored in the phone will be lost.

## **Browser**

Connect the web page with the mobile network.

You can input different website to view different web page.

Press menu key you can do:

- Open a new window.
- Add a new bookmark or manage bookmarks.
- Display all windows you have opened.
- Refresh
- Exit the current window.

Do more things such as: forward, go to homepage, add bookmark and so on

## **Calculator**

Perform basic calculations such as addition, subtraction, multiplication and division.

## Calendar

Click calendar to enter calendar menu.

### Create agenda

1. Press menu key and click “New agenda” button.
2. Choose memo, appointment, anniversary, task.
3. Input name and set time.
4. Press menu key and click “Done” button.

The new agenda will appear on the calendar menu when you entering again.

## Call log

Enter to view all calls, missed calls, incoming calls, outgoing calls, and rejected calls.

Select and view the detailed information about it.

Hold a selected call pop up submenu:  
Edit number before call, Send text message, Add to contacts, Remove

from call log.

## **Camera**

You can take photos conveniently by using camera.

### **Take photos**

Click camera to enter camera interface.

Click to take photos.

In the preview interface:

1. View photos you have taken.
2. Set white balance, scene mode, store location, picture quality, contrast, select storage position.

## **Contacts**

Click menu key, pop up the submenu: Search/New contact/ Display options/Accounts/Import/Export.

### **Search for a contact**

1. Click fast search key or click “Search”;
2. Enter the first few letters of the contact name, all contacts beginning

with these letters appear.

## **Add a contact**

Click “New contact” , you can add a new contact to the phone or card.

## **Manage contact**

Click the item to view the detail information about the contact.

Hold the item to view the submenu: View contact/ Text contact/ Add to favorites/ Edit contact/ Delete contact.

## **Downloads**

View and manage all download files.

## **Email**

You can configure Email for most accounts in just a few steps according the tip on the screen.

The functions of the Email:

1. Receive email and view the text and attachments via your phone.
2. Reply and forward a received email.

3. Create a new email.

Apart from this, you also can set the inbox checking frequency.

## **Firewall**

If you turn on the call firewall, you can set the call firewall mode.

Add the blacklist or whitelist.

## **FM Radio**

You should insert earphone before using FM Radio.

Search radio settings and play it:

1. Click menu key, select “Scan” scan all settings.
2. Select some settings and play it.

## **Gallery**

View pictures and videos stored in phone or memory card.

## **Messaging**

Click “New message” to creat message.

## **Create message**

Input receiver's phone number and edit contents.

- For phone number:
  1. You can click the keyboard to input number directly.
  2. You can select number from messages, contacts or call logs.
  3. You can select several numbers to send.

**Notes:**

If the message editing is interrupted by incoming calls, alarm clock, powering off, the entered texts will be saved temporarily.

- Click "Type to compose" to edit the message.
- Press Menu key, pop up the submenu.

## **Music**

Click to enter music player.

1. Artists: view different artists' songs.
2. Albums: view different albums

- list.
3. All songs: view all songs list.
  4. Playlists: view current playlist and saved playlist.

Press menu key when playing a song, you can do :

- View the library details.
- Party shuffle.
- Add the song to playlist.
- Set the song as ringtone.
- Delete the song.

## **My files**

View files stored in the phone or memory card.

Press menu key to pop up sub menu when entering you can do:

1. Create folder.
2. Sort by name /date / size/type.
3. View folder properties.
4. View memory status.

## **Note pad**

- **Create note**

1. Click “Add note” button when

entering.

2. Edit contents and title.
3. Click “Save” button to save the note.

### ● **Delete note**

1. Hold a note and pop up option menu.
2. Select “delete”.

## Phone

Input phone number, click  to make a call, click  to delete the number you do not need or hold it to delete all numbers before the cursor.

## Recorder

You can record for a long time, please make sure your phone has enough storage.

### **Record :**

1. Keep the phone near the sound source.
2. Click “” to record, click “” to stop.

3. Finish the record, you can select “save” or “cancel”.

## **Settings**

### **SIM management**

Select the network operator.

### **Wireless & networks**

- Turn on Data connect.
- Click to turn on Airplane mode.
- Click to turn on WLAN or Bluetooth.
- Set the WLAN or Bluetooth.
- Set up & manage Virtual Private Networks.
- Set the tethering & portable hotspot.

### **Call settings**

Select TTY mode or DTMF Tones from the combobox.

### **Sound**

- Set silence mode or not.
- Set Vibrate way as: Always/ Never/ Only in silent mode/ Only when not in silent mode.

- Set volume for rington/media or alarm.
- Set your default incoming call ringtone.
- Set your default notification ringtone.
- Turn on/off Audible touch tones/ Audible selection/ Audible power on and off/ Screen lock sounds/ Haptic feedback.

## **Display**

- Adjust the brightness of the screen.
- Turn on Auto-rotate screen.
- Select the animation as the listed mode.
- Adjust the delay before the screen automatically turns off.
- Turn on or off the key backlight.
- Adjust the G-Sensor.

## **Auto on / off**

Set the time of auto power on or off.

## **Location & security**

Set my location, screen unlock, card lock, passwords, device administration and credential storage.

- Choose different locating mode: Use wireless networks, GPS satellites, turn on or off them.
- Lock screen with a pattern, number, or password.
- Select device administrators.
- Set the Credential storage.

## **Applications**

- Unknown sources: Allow installing non-market applications or not.
- Select your preferred install location.
- Manage applications: Manage and remove installed applications.
- Running services: view and control currently running services.

- View storage used by the applications.
- View the battery use.
- Set options for application development.

## **Accounts & sync**

Turn on or off background data or Auto-sync.

Click “Add account”

## **Privacy**

Erase all data in phone.

## **Storage**

View SD card and Internal storage.

## **Language and keyboard**

- Select language and input method.
- Set android keyboard or TouchPal keyboard.

## **Voice input & output**

- Voice recognizer settings: select the Language and set the SafeSearch as off, moderate, strict.

- Turn on or off the Block offensive words.

## **Accessibility**

- Turn on Accessibility.
- Turn on Power button ends call.

## **Date and time**

Set the date, time, time zone and formats.

- The current date and time will display on the idle screen if you choose automatic.
- If you do not choose automatic, please set the date, time zone and time yourself.
- Set the format of time and date.

## **About phone:**

View phone status and software version.

## **Stopwatch**

Click Stopwatch icon to display the stopwatch interface.

Click “Start” button to start the watch, click “Lap”button to record current

time, click “Stop” button to stop recording, click “Reset” button to clear all records.

## **Voice Dialer**

Keep the voice near the mike, say the number as the examples.

## **Voice search**

Keep the voice near the mike, speak the content.

## **World time**

Click world time icon to display the world time interface.

You can view local time of some cities around the world.

- Add City: click “Add City” button, select some cities (no more than 3 cities), then click “OK” button.
- Delete selected: click “Delete selected” button, select some cities, then click “OK” button.

# Safety information

For safety, only an approved adapter can be used. It does not bear responsibility for any faults that may arise due to non-conformation to this guide. For example:

Do not, in any way, cause a short-circuit. It may start a fire or the phone may explode causing injury.

Do not create a sudden impact on the battery by throwing it.

Do not dispose off batteries by putting them in a fire. They may explode or catch fire due to the electrolyte within.

## Caution

Do not use the phone with a wrong battery.

Avoid using the phone in high temperature or humidity. Avoid spilling any liquid on this phone. If the phone gets wet, Switch off phone and turn off AC power supply.

Keep the phone dry. Submersion, humidity, and liquids containing minerals may corrode internal electronic circuits.

Do not store or use the phone in dusty or dirty areas as this can damage the moving parts.

Do not store the phone in hot/ cold areas.

Do not attempt to open it. Non-expert handling of the phone could damage it. Consult your authorized dealer for assistance.

Do not drop, knock or shake the phone. Rough handling may break the internal circuit boards.

Do not use harsh chemicals, cleaning solvents or strong detergents to clean the phone. Wipe it with a soft cloth that has been slightly dampened in a mild soap and water solution.

Do not paint the phone. Paint can clog the phone's moving parts and prevent proper function.

During lightning, do not touch the power plug or the phone line. It may result in an electric shock or death.

Do not install the phone under direct sunlight or on an uneven surface.

Before using the plug, check the available power voltage. Inaccurate power voltage may cause fire and damage.