


# XQG90-HR1214/XQG90-HR1214S

This washing machine is equipped with automatic safety functions which detect and diagnose at an early stage and react appropriately, e.g.:

- A. "Door open" indication
- B. "I-Check" indication
- C. "Water Tap Closed" indication
- D. "Clean Pump" indication
- E. Programme selector
- F. "Start/Pause" button
- G. "Reset" button
- H. "I.Program" button
- I. "Spray" button

## BASIC CHART

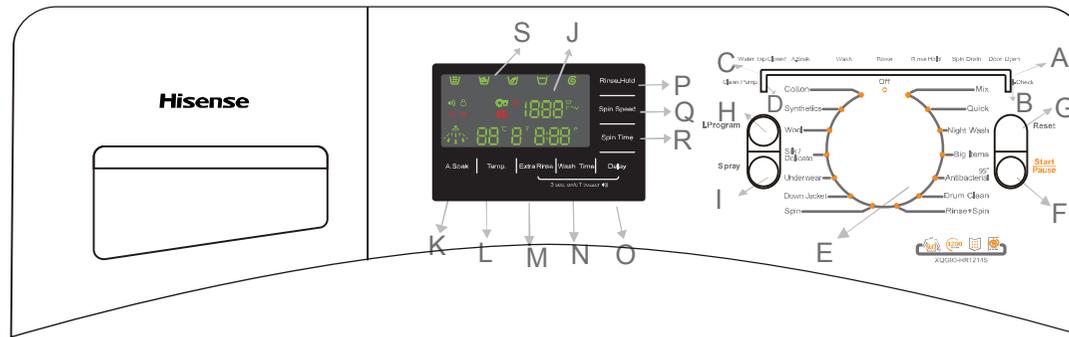

- J. Display window
- K. A. Soak button
- L. Temperature button
- M. Extra Rinse button
- N. Wash Time button
- O. Delay button
- P. Rinse Hold button
- Q. Spin Speed button
- R. Spin Time button
- S. Programme sequence indication



Program	Care Labels	Type of wash/Notes - Respect the manufacturer's recommendations on the care label	Max. Load kg	Detergents and additives			Selectable options											Max. Spin Speed rpm		
				Pre-wash	Main wash	Softener	A. Soak	Temp	Extra Rinse	Default times of rinse	Wash Time	Delay	Spin Time	Spin Speed	Rinse Hold	Spray	I. Program		Reload in process	
<b>Cotton</b> Cold, 30°C, 40°C, 50°C, 60°C, 70°C, 80°C, 95°C		Normally to heavily soiled towels, underwear, table and bed linen etc. made of cotton and linen.	9.0	*	Yes	*	*(2)	*	*	*	3	*(2)	*	*	*	*	*	*	—	1200
<b>Synthetics</b> Cold, 30°C, 40°C		Normally soiled garments made of artificial fibres (like polyester, polyacryle, viscose etc.) or their blends with cotton.	3.6	*	Yes	*	*	*	*	*	2	*	*	*	*	*	*	*	*	1000 <sup>(1)</sup>
<b>Mix</b> Cold, 30°C, 40°C, 50°C, 60°C		Lightly to normally soiled robust laundry made of cotton, linen, artificial fibres and their blends. Effective one-hour programme. Make sure to wash only similar colours together in one wash load.	3.8	*	Yes	*	*	*	*	*	2	*	*	*	*	*	*	*	*	1200
<b>Quick</b> Cold, 30°C		Shortly worn outer clothing made of cotton, polyester, polyamide and blends with cotton.	3.8	—	Yes	*	—	*	*	*	1	—	*	—	*	*	*	*	*	1200
<b>Silk/Delicate</b> Cold, 30°C		Silk and delicate clothing, dresses skirts, shirts and blouses.	2.5	*	Yes	*	*	*	*	*	3	*	*	—	*	*	*	*	— <sup>(3)</sup>	1000 <sup>(1)</sup>
<b>Wool</b> Cold, 30°C, 40°C		Only woollens, labeled with the Woolmark and identified as machine washable. This program (40°C) is tested and approved by the Woolmark corporation for machine washable wool. If you select "Rinse Hold" do not leave items to soak for too long	2.0	—	Yes	*	—	*	*	*	3	—	*	—	*	*	*	*	*	1000 <sup>(1)</sup>
<b>Underwear</b> Cold, 30°C, 40°C		Underwear made of cotton	3.8	*	Yes	*	*	*	*	*	2	*	*	—	*	*	*	*	— <sup>(3)</sup>	1000 <sup>(1)</sup>
<b>Big Items</b> Cold, 30°C, 40°C, 50°C, 60°C		Blankets made of synthetic fibres; bedcovers filled with feathers, polyester or other artificial fibres; sleeping bags, bathmats and similar items.	9.0	*	Yes	*	*	*	*	*	3	*	*	*	*	*	*	*	*	1200
<b>Down Jacket</b> Cold, 30°C, 40°C, 50°C, 60°C		Down jacket	2.5	*	Yes	*	*	*	*	*	2	*	*	*	*	*	*	*	*	1200
<b>95° Antibacterial</b> 70°C, 80°C, 95°C		This program eliminates bacteria, ensuring sanitization of your laundry which is difficult to lose colour.	9.0	*	Yes	*	*	*	*	*	3	—	*	—	*	*	*	*	*	1200
<b>Drum Clean</b> Cold, 30°C, 40°C, 50°C, 60°C, 70°C, 80°C, 95°C	—	To clean the drum of the machine which can be soiled after many cycles. If need cleanser, you should use foamless cleanser, otherwise the foam may go out of the machine. If you select 95°C, the cleanser is not needed.	—	—	Yes	—	—	*	—	*	3	—	*	—	*	—	*	*	—	400
<b>Rinse+Spin</b>	—	Rinse and spin program Same as the last rinse and the final spin in the "Cotton" program.	9.0	—	—	*	—	—	*	*	1	—	*	—	*	*	*	*	—	1200
<b>Spin</b>	—	Same as the spin cycle in the "Cotton" program.	9.0	—	—	—	—	—	—	—	0	—	*	*	*	—	—	*	—	1200
<b>Night Wash</b> Cold, 30°C, 40°C, 50°C, 60°C	—	This program is used to wash at night with low noise, and there is no beep in the end. The last step, which is after spin and before you take out the laundry, in order to let fresh air in and prevent wrinkles, the drum will rotate discontinuously for several hours, you can press "Start/Pause" button to end the step.	9.0	*	Yes	*	*	*	*	*	2	*	*	—	*	*	*	*	*	800

Optional: \* Dosing required: Yes

(1) For protect the laundry, spin speed under 1000rpm

(3) If you select "A. Soak", the "Reload in process" function can be selected.

(2) Option available for use under 70°C.

BASIC CHART

PROGRAM DATA		
Programme	Temperature (°C)	Approx.Duration* (About)(hours:minutes)
Cotton**	70,80,95	<b>2:18</b>
Cotton	60	<b>3:24</b>
Cotton	Cold(20),30,40,50	<b>2:09,2:10,2:14,3:17</b>
Synthetics	Cold(20),30,40	<b>1:18,1:19,1:23</b>
Mix	Cold(20),30,40,50,60	<b>0:50</b>
Quick	Cold(20),30	<b>0:15</b>
Silk	Cold(20),30	<b>0:45</b>
Wool	Cold(20),30,40	<b>0:38</b>
Underwear	Cold(20),30,40	<b>0:32</b>
Big Items	Cold(20),30,40,50,60	<b>2:09,2:10,2:14,2:11,2:18</b>
Down Jacket	Cold(20),30,40,50,60	<b>0:50</b>
95° Antibacterial	70,80,95	<b>2:18</b>
Drum Clean	Cold(20),30,40,50,60,70,80,95	<b>0:50,0:51,0:55,1:03,1:10,1:38,1:38</b>
Night Wash	Cold(20),30,40,50,60	<b>0:50</b>

\*The actual running time can deviate from the values in the table, because it takes into account the operating conditions applicable at that time.

\*\*To reduce water temperature, some cold water is added at the end of the main wash cycle, before the pump drains the water out.

PARAMETER	
Model	XQG90-HR1214 XQG90-HR1214S
Washing Capacity	9.0kg
Max.spin speed	1200rpm
Net Weight	78kg
Dimension(WXDXH)	600X620X850mm
Rated Voltage	220V-240V ~
Heating Power	1900W
Washing Power	300W

## ADD DETERGENTS, CLOSE THE DOOR AND SELECT THE PROGRAMME

Add detergent as indicated on the front page and as described in the chapter "Detergent and Additives" in your Instructions for Use.

1. Turn the programme selector to the desired programme and temperature.
2. The time display shows the duration of the chosen programme (in hours and minutes).

## SELECT ANY DESIRED OPTION

Press the selected option button once, the current value is displayed. By pressing the button repeatedly, it will display the values in sequence. By pressing the button of the desired option, the respective indicator lights up.

When the combination of programme and additional options is not possible, the indication lights switch off automatically. Unsuitable combinations of options are deselected automatically.

### A. Soak

· Add the powder detergent or the powder degerming agent in the prewash chamber.  
· Recommended for laundry which is heavily soiled or which should be degermed, the duration can be chose to be 28 minutes, 38 minutes or 48 minutes. During the 18 minutes from the beginning, the drum is turning, then it will stop and the laundry is soaked. In the end, the water in the tub is drained off.

### Temp.

On selecting a programme, a predefined temperature is displayed. Press "Temp." to set another temperature.

### Extra Rinse

· An extra rinse is added for each press of the button. Up to

3 rinses can be selected, to prolong the rinse cycle.

· The times of rinses can be displayed.

· This option is particularly suitable for areas with very soft water or for washing baby linen, and helps people with allergies.

### Wash Time

Wash time can be changed when press this button, according with different programme, the range of -90~10 minutes is max

### Spin Time

This function is only suitable for spin programme. For the Spin Program, pressing the button to select any one kind of time such as 5 minutes, 8 minutes, 10 minutes, 14 minutes.

### Spin Speed

· Every programme has a predefined spin speed.  
· Press the button to set another spin speed.  
· If spin speed "0" is selected, the final spinning is cancelled, and the water is drained out only. However, intermediate spin phases remain during rinse.

### Rinse hold

· If you select "Rinse hold", the laundry remains in the last rinse water without progressing to the final spin cycle, to avoid creasing and prevent colours from changing.  
· To terminate the "Rinse Hold" by draining the water, without any spinning, press the "Start /Pause" button.  
· To terminate the "Rinse Hold" by spinning the laundry, press the "Spin" button to select the desired spin speed and then "Start /Pause" to start the spin cycle.

### Delay

The "Delay" allows to run the machine at the consumer's convenience, for example at night when electricity is cheaper.

· Select programme, temperature and options.

· Press the "Delay" button to select the delay time by 1 to 23 hours;

· Press the "Start/Pause" button, indication ☺

lights up and the countdown of the delay time begins.

· The time delay indication disappears when the programme starts and it is replaced by the remaining programme time.

· Once having pressed the "Start/Pause" button, the number of hours preselected can be reduced by pressing again the "Delay" button.

**To cancel the "Delay"**

**..before you press the "Start/Pause" button:**

· Turn the programme selector to another position or press the "Reset" button.

**..after having pressed the "Start/Pause" button:**

· Press the "Reset" button for at least 3 seconds - the start delay time disappears from the time display.

## PROGRAMME START

Open the tap and press the "Start/Pause" button.

The programme sequence indicator shows the current programme phase, running from left to right through Soak, Wash, Rinse, Rinse Hold, Spin.

The time display shows the remaining programme time.

## PROGRAMME END

· All the lights of the programme sequence indicator are off, and the "Door open" indication lights up.

1. Turn the programme selector to the "Off" position.
2. Close the water tap.
3. Open the door and unload the machine.
4. Leave the door open to allow the drum to dry.

## CHANGE PROGRAMME AND/OR OPTIONS AFTER PROGRAMME START

1. Press the "Start/Pause" button to pause the programme.
2. Select the new programme (with temperature), any options and another spin speed if you want.
3. Press the "Start/Pause" button again. The new programme continues at the same position where the previous programme was interrupted. Do not add detergent for this programme.

## RESET A RUNNING PROGRAMME BEFORE THE END

The "Reset" button cancels a programme before the end.

· Press the "Reset" button for at least 3 seconds. Any existing water is drained out before the door can be opened.

## Spray

Press the "Spray" button before the programme start, the spray function is available, then can improve the wash performance

## SUGGEST DRUM CLEAN

After every 50 whole cycles, the indication light "☺" light up until the user select "Drum Clean" programme to clean the drum.

## TURN OFF THE END SOUND

Press the "Extra Rinse" and "Delay" buttons at the same time for at least 3 seconds, the end sound can be turned off or turned on.

## I. PROGRAM

When you have chosen the desired washing process but not yet press the "Start/Pause" button, you can press the "I. Program" button for at least 3 seconds. Each washing has its predefined process. When you want to reset a new process for each washing program, the original one will be overwritten by then. Press Process Program Selector Knob when you want to have this function. Choose the relative process. Hold "I. Program" button for at least 3 seconds and press "Start/Pause" button to recall the favourite process.

## "DOOR OPEN" INDICATION

Before starting and after end of a programme, the lamp lights to show that the door can be opened. As long as a wash programme is running, the door remains locked and must on no account be forced open. In case you have an urgent need to open it during a running programme, refer to "Cancel (Reset) a running programme before the end".

## RED INDICATIONS

### "Water tap closed"

The appliance has no or insufficient water supply. Open the water tap; if the indication still lights up, refer to the "Troubleshooting Guide" in the Instructions for Use.

### "Clean pump"

Waste water is not pumped out. Check whether the drain hose is kinked or the filter must be cleaned; in the latter case refer to the Instructions for Use ("Removing the Filter")

## RELOAD IN PROCESS

If you want to add extra clothing during a running programme, please confirm the water level is safe for us, then press the "Start/Pause" button.

- If the door is allowed of being opened during a running programme, the indication "☺" light on. After the door open lamp lights to show that the door can be opened, clothing can be added.
- If the indication "☺" light on, it indicates that adding extra clothing is forbidden, allowing time is missed, or the temperature in the drum is above 40°C.