

Hisense

Hisense Infinity H50 (HLTE322E)

User Manual

Before using your phone, read the User Manual thoroughly.

Contents

Phone Basics

Your phone at a glance	1
Carrying out basic operations	2
Using the notification center	6
Using SIM and MicroSD cards	7
Battery charging	9
Other hardware features	11

Troubleshooting

I can't turn my phone on	12
My phone keeps turning off automatically	12
I can't use an application on my phone	12
My phone's standby time is too short	13
My phone isn't charging properly	13
Touchscreen error when charging	14
I've forgotten my password	14
My PIN is locked	14
I can't use the Internet or make calls	14
My calls don't connect	15
Phone doesn't make a sound when it rings	15

Phone

Making calls	16
Making calls from contacts	16
Making calls from recents	16

Contacts

Importing contacts	17
Creating contacts	17
Searching for contacts	17

Messages

Sending messages	18
Viewing messages	18
Searching messages	18

Camera

Taking photos	19
Taking panorama	19
Recording videos	19

Photos

Viewing photos or videos	20
Deleting photos or videos	20
Sharing photos or videos	20

Chrome

Using Chrome	21
--------------	----

Clock

Alarms	21
Clock	22
Stopwatch	22
Timer	22

Recorder

Recording sound	23
Playing a recording	23
Managing recordings	23

Calculator

Making calculation	23
--------------------	----

FM Radio

Listening to radio	24
--------------------	----

Security and Privacy

Fingerprint unlock	25
Face unlock	26

Safety

Safety precautions	28
Safe battery charging	31
Protecting your hearing	31
Protecting the environment	32
Specific Absorption Rate (SAR)	32
Reducing your radiation exposure	32
Other important information	33
Disclaimer	34
Frequency bands and power	35
Compliance	36

Safety symbols in this document

The following symbols are used throughout this document:



Warning: situations that could cause injury to yourself or others.



Caution: situations that could cause damage to your device or other equipment.



 
Notice: notes, usage tips, or additional information.

Phone Basics

Use the information in this section to get to know your phone better.

Your phone at a glance

Get to know your phone with the following figure and legend.

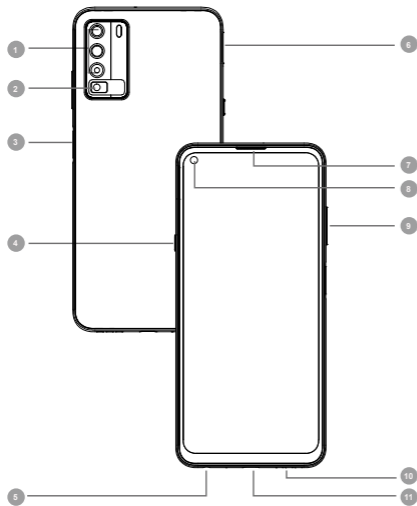

1. Rear camera	7. Receiver
2. Rear camera	8. Front camera
3. Fingerprint sensor/Power button	9. Volume button
4. AI button	10. Loudspeaker
5. Headset socket	11. USB port
6. Card slot	



The phone features may vary based on your location, language, carrier and model.

Carrying out basic operations

This section describes how to carry out basic functions on your phone.




Before using your phone for the first time, fully charge your battery. For more information on charging your battery, see **Battery charging**.

Turning your phone on

- To turn your phone on, press and hold the power button until the screen turns on.
- When turning your phone on for the first time, or after performing data reset, follow the onscreen instructions to set up your phone.
- To force restart your phone, press and hold the power button until your phone vibrates.

Turning your phone off

 
To power off your phone, press and hold the power button, and then tap the  icon.

Using touchscreen gestures

This section describes how to use touchscreen gestures to help control your phone.


Tapping

To open an app, to choose a menu item, to press an on-screen button, or to enter a character using the keyboard on the screen, tap it with your finger.

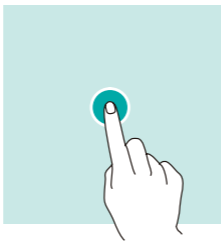



Tapping and holding

 Tap and hold an item on the screen for more than 2 seconds to access available options.


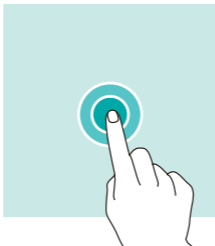


Swiping

  Swipe to the left or right on the home screen or the Apps screen to view other panels.

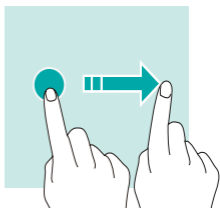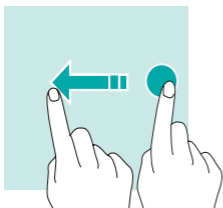


  Swipe upwards or downwards to scroll through a web page or a list of items.

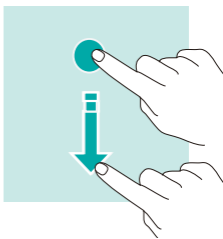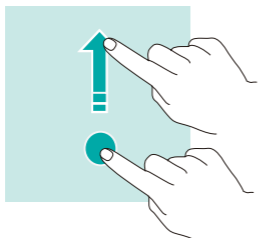

Spreading and pinching

 Spread two fingers apart on a web page, map or image to zoom in a part.

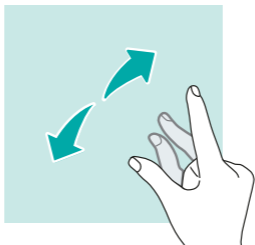


Pinch to zoom out.



Dragging

 To move an item, tap and hold it and drag it to the target position.

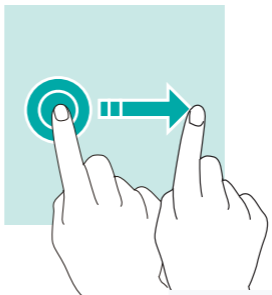

Using the navigation bar

You can find your navigation bar control at the bottom of your screen.

- To go back to the home screen, swipe up from the bottom of the screen .
- To open the list of recent apps, swipe up from the bottom, hold, then release .

- To go back to the previous screen, swipe from either the left or right edge.

Locking and unlocking screen

Locking the screen

- To lock the screen, press the power button.
- Go to **Settings > Display > Screen timeout** to change how quickly your screen goes to sleep. The screen locks and goes into sleep mode when you don't use your phone for a while. This is to save power and stop accidental phone use.

Unlocking the screen

To unlock the screen, press the power button and swipe up.

 
Using the notification center

The notification center is where you can view the latest notifications relating to the operation of your phone.

Opening the notification center

To open and view the notification center:

- 1 Swipe down from the top of the screen to see the notification center.
- 2 Swipe down again from the top of the screen to see the shortcuts tab.

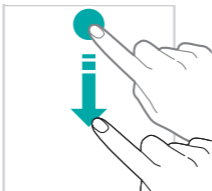

Closing the notification center

Swipe up to close the notification center.

Setting notification options

 
To set notification options, go to **Settings > Apps & notifications > Notifications**.

Using SIM and MicroSD cards

Inserting SIM and MicroSD cards

Always ensure that SIM and MicroSD cards are inserted correctly into your phone.

The following figure shows the correct way to insert SIM and MicroSD cards into your phone.

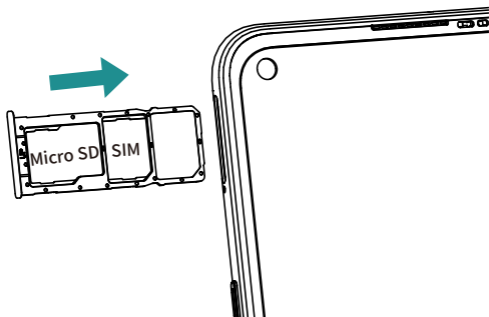

When inserting your card tray, make sure that the card tray is level and that the card is aligned correctly.

 


Do not use cut or modified SIM or MicroSD cards with your phone, as these may not be recognized and could damage the card tray.

Ejecting SIM and MicroSD cards

Always ensure that SIM and MicroSD cards are ejected correctly from your phone.

The following figure shows the correct way to eject SIM and MicroSD cards from your phone.

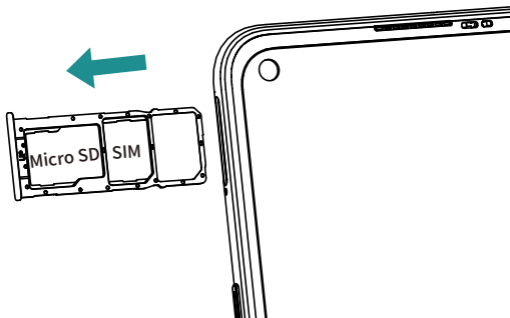

To eject SIM or MicroSD cards, insert your SIM eject pin into the small hole next to the card tray.



Be careful not to scratch your phone or hurt yourself when using your SIM eject pin. Store your SIM eject pin out of the reach of children to prevent accidental swallowing or injury.

Battery charging

Follow instructions in this section to charge your battery safely and preserve battery life.

Charging your battery

Fully charge the battery before using it for the first time, or when the phone has not been used for a long time, or when the battery is low.

To charge your battery, do the following:

- 1 Connect your USB charging cable to your USB power adapter. Plug the end of the USB cable into the USB port, and the USB power adapter into a power socket.
- 2 Once your battery is fully charged, disconnect your phone from your USB charging cable.

Important safety precautions

The following precautions are extremely important and must be followed at all times:



The battery is built into the phone and is not removable. Do not try to remove the battery by yourself.



Risk of explosion if battery is replaced by an incorrect type. Dispose of used batteries according to the instructions.

To charge your phone safely, it is also important to pay attention to the following points:

- Use only approved chargers, batteries, and cables. Using an unapproved or incompatible power adapter, charger, or battery may damage your phone, shorten its lifespan, or cause a fire, explosion or other hazards.
- Avoid using your phone when it is charging. Do not cover your phone or power adapter.
- Connect your charger properly. Not connecting your charger properly can cause serious damage to your phone. Any damage caused by misuse is not covered by the warranty.
- Your phone can be safely charged at temperatures between 0°C and 40°C. Charging in environment where the temperature is below 0°C or higher than 40°C will harm battery performance and shorten battery life. Regular, long-term charging in extreme temperatures will damage your battery.
- Unplug your charger from the electric socket when not charging your phone.

Protecting your battery

For safe and effective charging that also protects your battery, you must also pay attention to the following points:

- If your AC power supply is lower voltage, or you charge from computer or other non-standard sources, you may need to charge your phone for longer.
- Your phone might not start straight away if the battery is low. Your phone will start normally once it has charged for a short while.

- The time your phone needs to charge may depend on room temperature and your battery level.
- The phone and charger may heat while charging. This is normal and shouldn't affect your phone's lifespan or performance. If your battery becomes much hotter than usual, stop charging your phone and put it in a cool place. If your phone surface is hot, avoid touching your phone for too long.

Other hardware features

USB on-the-go (OTG)

Your phone is USB on-the-go (OTG) compatible. This means your phone can host other USB devices, such as mice, or keyboards. Use a standard OTG data cable when using this function.

Troubleshooting

This section lists common problems you may have when using your phone. Check to see whether your issue is listed here before contacting the Hisense service center.

I can't turn my phone on

If you can't turn your phone on, try the following:

- Press and hold power key for two seconds or longer.
- Check that the battery is fully charged before turning your phone on.
- Press and hold the power button until your phone vibrates.
- Check that your battery is properly connected to your phone, and that the connecting points are clean. If your phone has a built-in battery, contact the service center.

My phone keeps turning off automatically

If your phone keeps turning off automatically, try the following:

- Check your battery power. If the power is low, charge your phone.
- Check softwares or applications to see if they are normal. If not, restart your phone.

I can't use an application on my phone

If you can't use an application on your phone, try the following:

- Check if your phone has sufficient storage. Delete some messages from your phone.

- Check if the application is damaged. Uninstall and reinstall the application. If cannot be fixed, try resetting system.
- Chances are that the application is not compatible. Uninstall the application and choose a compatible version.
- Check and enable applications management permissions.

My phone's standby time is too short

If your phone's standby time is too short, try the following:

- Chances are that the battery performance decreases. Contact service center to change the battery.
- If you play games or listen to music for a long period of time, shorten the time.
- If the screen is too bright, adjust the brightness of the screen.
- If the phone is used in weak signal environment, the standby time will be short. Please move to strong signal locations.
- Turn off cellular data, GPS, Bluetooth, Wi-Fi switch when not using them.
- Close the application not used.
- Uninstall the applications not used for a long period of time.

My phone isn't charging properly

If your phone isn't charging properly, try the following:

- Ensure that your phone is charging at a normal temperature.
- Plug the charger into a different socket.
- Recharge your phone for about half an hour.

- Chances are that the battery has a problem. If the battery has been built-in, contact service center.
- Ensure that the charger is not defective. If the charger is defective, replace it.
- If the charger fails to charge, please change or repair it.

Touchscreen error when charging

If there is touchscreen error when charging, try the following:

- If the charging equipment is incompatible with your phone, it may cause some problems. Use charger supplied and stable charging equipment.
- Check whether softwares or applications are normal or not. Restart your phone.

I've forgotten my password

If you forget your password, contact service provider.

My PIN is locked

If you enter wrong PIN three times in a row, contact service provider.

I can't use the Internet or make calls

If you can't use the Internet or make calls, try the following:

- Chances are that signal is too weak. Move to an open area and try again.
- Chances are that the phone is out of service area. Check if the Internet is available.

- Chances are that airplane mode is on. Turn off airplane mode.
- Check if software is abnormal. If so, restart the phone.
- Check if SIM card has failure. If so, check or change SIM card.
- Ensure that the dialing is right.
- Check if cellular data setting has failure. If so, go to Settings to set up cellular data.
- Check if pre-paid charge has reached its limit. If so, contact service provider.

My calls don't connect

If your calls don't connect, try the following:

- Check if phone number is too long.
- Ensure international roaming service and international call service are enabled. If not, contact service provider.



Phone doesn't make a sound when it rings

If your phone doesn't make a sound when it rings, check if silent or vibrate mode is enabled.

Phone


Making calls

To make calls:

- 1 Tap  .
- 2 Tap the number to enter a phone number.
- 3 Tap  to make a call.


Making calls from contacts

To make calls from contacts:

- 1 Tap  .
- 2 Tap All contacts to choose a contact.
- 3 Tap the contact number.

Making calls from recents


To make calls from call logs:

- 1 Tap  .
- 2 Scroll up or down to view the call record. Tap the name or number of the person you want to call.

Contacts



Importing contacts

To import contacts to your phone:

- 1 Tap .
- 2 Tap Import contacts .
- 3 Select an import option.



Creating contacts

To create a new contact:

- 1 Tap .
- 2 Tap .
- 3 Enter the contact's name, phone number and other contact information, and then tap **Done**.

Searching for contacts



To search for contacts:

- 1 Tap .
- 2 Use one of the following search methods:
 - Scroll up or down the contacts list.
 - Tap  at the top of the screen to search for a contact.
- 3 Select a contact. You can now call them, send them a text message, or edit their contact information.

Messages


Sending messages

To send messages:

- 1 Tap .
- 2 Tap **Start chat** to create a message.
- 3 Add recipients and enter a message.
- 4 Tap  to send the message.

Viewing messages

To view messages:

- 1 Tap .
- 2 Select a contact on the message list.
- 3 View your conversation.

Searching messages




To search messages:

- 1 Tap .
- 2 Tap  to enter keywords to search messages.

Camera


 


Taking photos

To take photos:

- 1 Tap .
- 2 Swipe to **Photo** on the screen. Spread two fingers apart on the screen to zoom in, and pinch to zoom out.
- 3 Tap  to take a photo. Your picture will be automatically saved to  .




Taking panorama

To capture a panorama shot:

- 1 Tap .
- 2 Swipe to **Panorama** on the screen. Hold your phone steady and then tap  to start shooting. Slowly move your phone in the direction indicated, holding the phone steady and ensuring the arrow stays levels with the center line.
- 3 Tap  when you are finished. Your picture will be automatically saved to  .

Recording videos


To record videos:

- 1 Tap .
- 2 Swipe to **Video** on the screen. Tap  to start recording the video. Spread two fingers apart on the screen to zoom in, and pinch to zoom out.
- 3 Tap  to finish recording.

Photos



Viewing photos or videos

To view photos or videos:

- 1 Tap  .
- 2 Select a photo or a video.


 
Deleting photos or videos

To delete photos or videos:

- 1 Tap  .
- 2 Tap and hold the photo or video that you want to delete, tap  .

Sharing photos or videos


To share photos or videos:

- 1 Tap  .
- 2 Select the photo or video that you want to share.
- 3 Tap  . Select your sharing method.

Chrome

Using Chrome


Connect the web to search for information and bookmark your favorite web pages to access them conveniently.

- 1 Tap .
- 2 Enter the address field in the search bar. You will have access to web pages; moreover, bookmarks, multiple window switching and other functions are supported.


Clock

This app includes the following functions:

Alarms

Tap . From the **Alarms** tab, you can do the following steps to set your alarms:

Adding an alarm

Tap  and set the alarm time, repeat times, alarm ringtone and others.


Enabling or disabling an alarm

Turn on or turn off the switch next to an alarm.


Configuring the alarm settings

Tap **> Settings** to configure the alarms.


Deleting an alarm

Tap and hold the alarm that you want to delete. Then tap .


Clock

Tap . From the **Clock** tab, you can do the following steps to set your clock:


Adding a city

Tap . Select a city from the list.


Deleting a city

Tap and hold the city that you want to delete. Then tap .

Stopwatch

- 1 Tap .
- 2 Go to the **Stopwatch** tab.
- 3 Tap **Start** to start the stopwatch. Tap **Pause** to pause the stopwatch. Tap **Resume** to reset the stopwatch. Tap **Reset** to reset the stopwatch.





Timer

- 1 Tap .
- 2 Tap **Timer**.
- 3 Set the countdown time and tap **Start** to start the timer. Tap **Pause** to pause the countdown.




Recorder

The device supports long periods of recording. Make sure your device has available storage before recording.



Recording sound

- 1 Tap  .
- 2 Tap  to start recording.
- 3 Tap  to stop recording. Tap  , then tap **Save**, the recording file is automatically saved in the phone. Tap **Delete**, the recording file is deleted.

Playing a recording

- 1 Tap  .
- 2 Tap  to find your recording.
- 3 Tap  to play the recording.


Managing recordings

- 1 Tap  .
- 2 Tap  .
- 3 Tap and hold a recording. You can rename, share or delete the recording file.

Calculator

Use calculator to do simple or complicated calculations.

Making calculation


Tap  , you can do simple calculations:

- Tap the number and calculate sign to do simple calculations.
- Go to advanced calculator tab by swiping your screen left.

FM Radio

Listening to radio

To use the FM Radio, first you need to connect your headphones.

 
- 1 Tap  to activate.
- 2 Select the frequency following the app instructions and set the volume to a comfortable level.

Security and Privacy

Fingerprint unlock

Fingerprint unlock helps you unlock your phone faster and can improve security.

Fingerprint sensor is on the side of your phone. See the following figure.

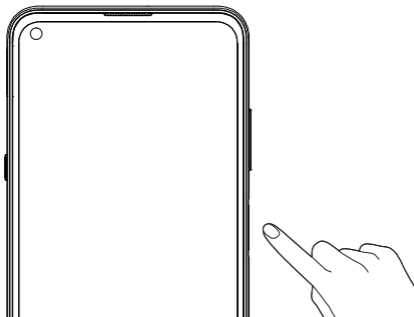

Adding a fingerprint


To add fingerprints:

- 1 Tap **Settings > Security > Fingerprint**.
- 2 To set a screen lock password, PIN or pattern along with your fingerprint, follow onscreen instructions.
- 3 To set your fingerprint, follow onscreen instructions and put your fingertip on the fingerprint sensor. Press the sensor lightly until your phone vibrates. Repeat using different parts of your fingertip.

- 4 Tap **Done**. You can now tap the sensor with your fingertip to unlock the screen.

Deleting fingerprint

To delete fingerprints:

- 1 Tap **Settings > Security > Fingerprint**.
- 2 Enter your password, PIN or pattern.
- 3 Tap  icon beside the fingerprint you want to delete.

Adding another fingerprint

To add another fingerprint:

- 1 Tap **Settings > Security > Fingerprint..**
- 2 Enter your password, PIN or pattern.
- 3 Tap **Add fingerprint**.

Face unlock

Face unlock can be used to unlock your phone.

Adding a face

To add your face:

- 1 Tap **Settings > Security > Face unlock**.
- 2 To set a screen lock password, PIN or pattern along with your face, follow the onscreen instructions.
- 3 Tap **Add a face**. Read the instructions carefully.
- 4 Register your face. You can now use your face to unlock the screen.

Deleting a face

To delete your face:

- 1 Tap **Settings > Security > Face unlock**.
- 2 Enter your password, PIN or pattern.
- 3 Tap **Clear facial recognition data**, and then tap **Clear**.

Safety

This section contains information on the secure and safe operation of your phone.

Safety precautions

For your safety and that of others, ensure you read, understand, and follow all of the information in this section.



Failure to obey the following safety information could result in fire, electric shock, injuries, or damage to your device or other property. Read all the safety information below before using your phone.

- Using unapproved or incompatible power adapters, chargers, or batteries may damage your phone, shorten its lifespan, or cause a fire, explosion, or other hazards.
- Your phone's ideal operating temperature is 0°C to 35°C. Your phone's ideal storage temperature is -20°C to 45°C.
- Pacemaker manufacturers recommend keeping a minimum distance of 15 cm between phone and pacemaker to prevent potential interference with the pacemaker. If you use a pacemaker, hold your phone on the side opposite to your pacemaker and do not carry your phone in your front pocket.
- Keep your phone and battery away from excessive heat and direct sunlight. Do not place your phone or battery on or in heating devices, such as microwave ovens, stoves, or radiators.
- Do not use your phone in a moist environment, such as bathroom. Prevent your phone from being soaked or

washed in liquid.

- Follow local laws and regulations while using your phone. To reduce the risk of accidents, do not use your wireless phone while driving.
- While flying in an aircraft or immediately before boarding, only use your phone according to instructions provided. Use of a wireless phone in an aircraft may disrupt wireless networks, can cause danger to aircraft operation, and may be illegal.
- To prevent damage to your phone's parts or internal circuits, do not use it in dusty, smoky, damp, or dirty environments or near magnetic fields.
- When charging your phone, plug the adapter into a socket which is near your phone and which is easy to reach.
- When not in use, unplug the charger from outlets and from the phone.
- Do not use, store or transport your phone in areas where flammables or explosives are stored (in a gas station, oil depot, or chemical plant, for example). Using your phone in these environments increases the risk of explosion or fire.
- Dispose of your phone, battery, and accessories according to local regulations. Do not throw phones or batteries away in your household trash bin or other non-recycling trash bin. Improper battery use or disposal may lead to fire, explosion, or other hazards.
- Consult your doctor and the device manufacturer to determine if operation of your phone may interfere with the operation of your medical device.
- Obey any rules or regulations set by hospitals and health care facilities.

- Do not crash, throw, puncture, drop, squeeze, or bend your phone.
- Do not try to take apart your phone or its accessories. Only authorized personnel are allowed to service or repair the phone.
- Use a dry soft cloth to clean your phone. Do not use water, alcohol, detergent or any chemicals.
- Keep your phone and charger out of the reach of children. Do not let children use the phone or charger without supervision.
- Phone accessories and phone accessory parts, especially small parts, must also be kept away from children to prevent choking.
- Power off your phone in any area where there is a risk of explosions. Do not charge your phone or use your phone in areas where there are chemicals or particles in the air. Obey all signs and instructions.
- Strictly obey relevant instructions in this guide while using USB cable. Failure to follow instructions may result in your phone or PC being damaged.
- Only use USB version 2.0. USB equipment with your phone.

Safe cleaning and maintenance

To ensure your safety and that of others, you must pay attention to the following safety tips when cleaning and maintaining your phone:

- Turn off your phone before cleaning and maintenance. Your charger should be unplugged from socket. Your phone and charger should be disconnected to prevent electric shocks

or short circuiting.

- Do not wipe your phone or charger with benzyl alcohol, chemical substances, chemical agents or abrasive cleaning agents. This is to avoid damaging phone parts or the functioning of your phone. You may clean your phone with a slightly damp anti-static cloth.
- Do not scrape or alter the phone case, or the paint on the phone, as it may cause allergic reaction. If such reaction occurs, stop using your phone immediately and seek medical help.
- Wipe dust off power plug and keep it dry to avoid risk of fire.
- If your phone or accessories do not work properly, contact your local vendor.
- Do not disassemble device or its accessories by yourself.

Safe battery charging

Follow the information on safe battery charging in the Battery charging, Safety precautions, and Protecting your battery sections of this user manual.

Protecting your hearing



- To prevent possible hearing damage, do not listen at high volume levels for long periods.
- Fully understand user manual before use.
- Ensure your player at low volume levels or power off before you leaving.

Protecting the environment

- Obey the local regulations on device packaging, battery and used device disposal and bring them to the collection point for proper recycling.



- Take your used, unwanted lithium batteries to a designated place. Do not dispose of used devices or batteries in a household rubbish bin.
- Proper collection and recycling of your device help ensure electrical and electronic equipment waste is recycled in a manner that conserves valuable materials and protects human health and the environment.

Specific Absorption Rate (SAR)

- Your phone is tested to comply with applicable requirements and regulations of the European Union of human exposure to radio wave. These requirements set a SAR limit of 2.0 W/kg averaged over ten gram of tissue when use in head or Body, and set a SAR limit of 4.0 W/kg averaged over ten gram of tissue when use in Limbs.
- Specific Absorption Rate (SAR) is used to measure radio waves absorbed by a body. The device complies with RF specifications when the device used at a distance of 5 mm from your body.
- This product was tested and recorded the maximum SAR value was 1.332 W/kg for the head, 1.277 W/kg for the body, 3.011 W/kg for the limb.
- The actual SAR level will be much lower than above value since the device has been designed to use the minimum energy for necessary communication with the base station.

Reducing your radiation exposure

You can reduce your exposure to radiation from your phone by doing the following:

- Use your phone in areas with good reception. Be especially careful in underground car parks and on train and car journeys.
- Use your phone when all the signal strength bars are displayed.
- Use a hands-free kit.
- During calls, keep your phone away from your abdomen (for pregnant women) and your lower abdomen (for teenagers).

Other important information

Important data usage and billing information

Your phone regularly connects to mail and Internet servers to improve your experience. This creates data exchanges that may be charged along with your existing package, or which may use prepaid credit.

To avoid billing problems related to Internet services, it is strongly recommended to use a suitable package or plan which includes unlimited Internet and emails and to avoid changing the default settings.

You can connect to Wi-Fi for faster, more streamlined service. If you can, use Wi-Fi for streaming, and for downloading games, videos and films.

Disclaimer

Unofficial headsets, chargers, and other accessories are not compatible with your phone. Using unofficial accessories can affect performance. Hisense is in no way responsible for any damage that occurs as a result of using unofficial accessories.

This user manual is intended to provide a general overview. Actual specifications and functions of your phone may be different from those contained in the user manual.

Your phone was fully tested after production. If there are any damages or defects due to manufacturing, follow the terms and conditions in the warranty card.

If there are issues with your phones related to operator features and services, follow the operator terms and conditions.

Note that your phone has specification and function limitations. These limitations cannot be considered manufacturer damage or as damage or defect of any kind.

Only use your phone for the purposes or functions for which it was designed.

Frequency bands and power

	Bands	Frequency	Tune-up Power
GSM	850	UL:824-849MHz; DL:869-894MHz	33.5 dBm
	900	UL:880-915MHz; DL:925-960MHz	33.5 dBm
	1800	UL:1710-1785MHz; DL:1805-1880MHz	29.5 dBm
	1900	UL:1850-1910MHz; DL:1930-1990MHz	30.5 dBm
CDMA	BC0	UL:824-849MHz ; DL:869-894MHz	24.5 dBm
WCDMA	B1	UL:1920-1980MHz; DL:2110-2170MHz	22.5 dBm
	B2	UL:1850-1910MHz; DL:1930-1990MHz	24 dBm
	B5	UL:824-849MHz ; DL:869-894MHz	24 dBm
	B8	UL:880-915MHz; DL:925-960MHz	24.5 dBm
LTE	B1	UL:1920-1980MHz; DL:2110-2170MHz	22 dBm
	B3	UL:1710-1785MHz; DL:1805-1880MHz	23.5 dBm
	B5	UL:824-849MHz ; DL:869-894MHz	24 dBm
	B7	UL:2500-2570MHz; DL:2620-2690MHz	22 dBm
	B8	UL:880-915MHz; DL:925-960MHz	23.5 dBm
	B20	UL:832-862MHz; DL:791-821MHz	24 dBm
	B38	UL&DL:2570-2620MHz	22.5 dBm
	B40	UL&DL:2300-2400MHz	23 dBm
Wi-Fi	2.4GHz	2400-2483.5MHz	EIRP 16 dBm
	5GHz	5150-5250MHz	EIRP 16 dBm
		5250-5350MHz	EIRP 16 dBm
		5470-5725MHz	EIRP 15 dBm
		5725-5850MHz	EIRP 13 dBm

	Bands	Frequency	Tune-up Power
Bluetooth	2.4GHz	2400-2483.5MHz	EIRP 9 dBm
GPS		1575.42±1.023MHz	
GLONASS		1602.5625±4MHz	
BEIDOU		1561.098±2.046MHz	
FM		87.5-108MHz	

Compliance



Wi-Fi(WLAN)

This equipment may be operated in all European countries.

The 5150-5350 MHz band is restricted to indoor use only in the following countries.

	BE	BG	CZ	DK	DE	EE	IE	EL	ES	FR	HR
	IT	CY	LV	LT	LU	HU	MT	NL	AT	PL	PT
	RO	SI	SK	FI	SE	UK	NO	IS	LI	CH	TR

Copyright

Copyright © 2021 Hisense

The user manual is protected under international copyright laws.

No part of the user manual may be reproduced, distributed, translated, or transmitted in any form or by any means, electronic or mechanical, including photocopying, recording, or storing in any information storage and retrieval system, without the prior written permission of Hisense Group.

Some of the contents of the user manual may not apply to your device, depending on the software and your service provider. All information in this document is subject to change without notice.



Manufacturer:

Hisense Communications Co., Ltd.

Address: 218 Qianwangang Road, Qingdao Economic & Technological Development Zone, Qingdao,
China

Importers:

Hisense France SAS

Address: 9 Rue des 3 Sœurs, 93420 Villepinte, France

Hisense Iberia, S.L.U

Address: Ronda Auguste y Louis Lumiere. 23 Nave 12. Edificio Lumiere - Parque Tecnológico 46980
Paterna (Valencia) - Spain

Hisense Italia S.r.l

Address: Via Montefeltro, 6/A, 20156 MILANO

Hisense South Africa

Address: The Estuaries, Building 17 Oxbow Crescent, Century City, Cape Town, South Africa

EU DECLARATION OF CONFORMITY

in accordance with
Annex VI of Directive [2014/53/EU](#) of the European Parliament and of the Council

1. For the following Radio equipment:

Product name / Number (s): Mobile phone

Model Number: HLTE322E, Hisense Infinity H50

Tradename or Brand: Hisense

Hardware number: H9_02

Software Version: L1800.6.01.01.ZA.06 with single SIM card

L1801.6.01.01.ZA.00 with dual SIM card

 
Software version note: Some software updates will be released by the manufacturer to fix some bug or enhance some function after placing on the market. All versions released by the manufacturer have been verified and still compliance with the related rules. All RF parameters (e.g.: frequency range, output power) are not accessible to the user, and can't be changed by the user.

2. Name and address of the manufacturer: Hisense Communications Co., Ltd.

218 Qianwangang Road, Qingdao Economic & Technological Development Zone, Qingdao, China

3. This declaration of conformity is issued under the sole responsibility of the Manufacturer.

4. Object of the declaration (identification of the radio equipment allowing traceability; it may include a colour image of sufficient clarity where necessary for the identification of the radio equipment):

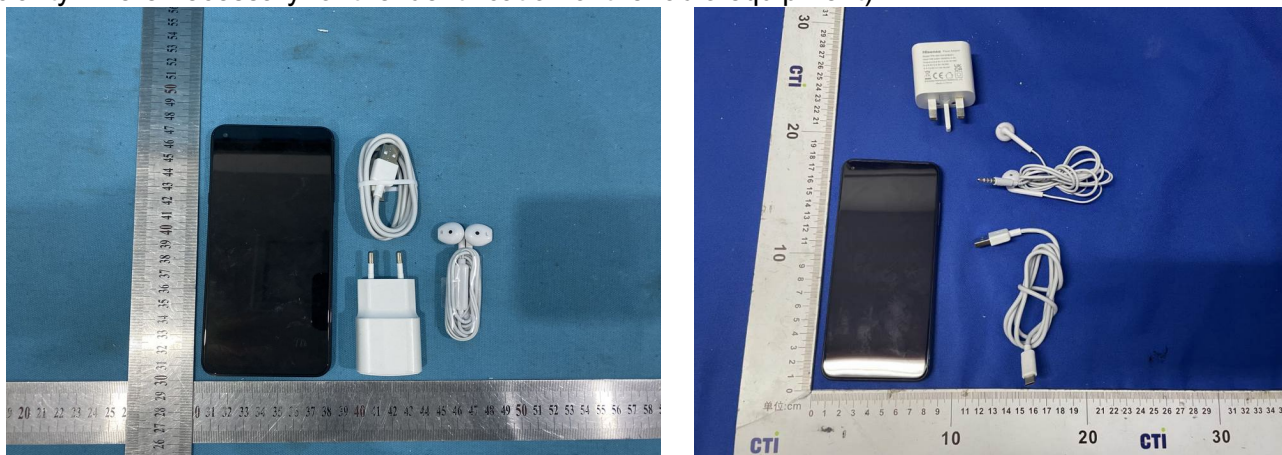

5. The object of the declaration described above is in conformity with the relevant Union harmonization legislation:
Directive 2014/53/EU (RED)

6. References to the relevant harmonized standards used or references to the other technical specifications in relation to which conformity is declared:

ETSI EN 300 328 V2.2.2(2019-07)

ETSI EN 301 893 V2.1.1(2017-05)

ETSI EN 300 440 V2.1.1 (2017-03)

ETSI EN 301 511 V12.5.1 (2017-03)

ETSI EN 301 908-1 V13.1.1(2019-11)

ETSI EN 301 908-2 V13.1.1(2020-06)

ETSI EN 301 908-13 V13.1.1(2019-11)

ETSI EN 303 413V1.1.1 (2017-06)

ETSI EN 303 345-1 V1.1.1 (2019-06)

Draft ETSI EN 303 345-3 V1.1.0 (2019-11)

EN 55032: 2015

EN 61000-3-2: 2014

EN 61000-3-3: 2013

EN 55035: 2017

ETSI EN 301 489-1 V2.2.3 (2019-11)

ETSI EN 301 489-3 V2.1.1 (2019-03)

ETSI EN 301 489-17 V3.2.4(2020-09)

ETSI EN 301489-19 V2.1.1 (2019-04)

Draft ETSI EN 301 489-52V1.1.0(2016-11)

EN 62368-1: 2014+A11: 2017

EN 50360: 2017, EN 50566: 2017, EN 62209-1: 2016, EN 62209-2: 2010+A1: 2019, EN 62479: 2010

7. Notified Body Name: MET Laboratories, Inc.

Notified Body Number: 0980

Notified Body Assessment Performed: Module B/C on Article 3.1a, 3.1b, 3.2 and 3.3

Technical File Identification Number: N/A

operate as intended and covered by the EU declaration of conformity: User instructions are provided in the User Manual. The Software and Hardware versions are specified above.

9. Additional information:

Referring to Article 10.2 of the Directive, this equipment is so constructed that it can be operated in all Member States, without infringing applicable requirements on the use of radio spectrum.

Referring to Article 10.10 of the Directive, there are no restrictions on putting this equipment into service or of requirements for authorisation of use. Please refer to the User Manual for details.

On behalf of:

Manufacturer: Hisense Communications Co., Ltd.

Address: 218 Qianwangang Road, Qingdao Economic & Technological Development Zone, Qingdao, China

(place and date of issue): 2021/1/29

(name, function): ...Zhang He ...PM.....

(signature): *Mark Zhang*