

Hisense

AIRFRY OVEN

Model No.: H20AOBK1S5



For you safety and continued enjoyment of this product always read the instruction book carefully before using.

INSTRUCTION MANUAL

TECHNICAL DATA

| | |
|--------------------------|------------|
| Model | H20AOBK1S5 |
| Supply Voltage | 220-240V |
| Frequency | 50-60Hz |
| Oven volume | 20L |
| Grill power | 1800W |
| Max. Setting Temperature | 230°C |
| Max. Setting Time | 120min |

IMPORTANT SAFEGUARD

When using electrical appliances, basic precautions should always be followed, including the following:

1. Read all instructions first.
2. Do not use this oven together with other electric appliance with high-power, in case of overload.
3. Do not touch hot surfaces when it's working or just finished working.
4. Always wear protective, insulated oven gloves when inserting or removing items from the hot oven.
5. Close supervision is necessary when any appliances are used by or near children.
6. Do not use this oven without supervision by adult.

INSTRUCTION MANUAL

7. To protect against electric shock, do not immerse cord, plug, or any parts of the oven in water or other liquid. Please make sure the plug is dry before use.

8. To protect against electric shock, do not touch, plug into or plug out the plug when your hand is wet.

9. To protect the power cord, do not hang anything on it or nip it; do not modify the power cord; do not pull or twist the power cord; please hold the plug steady when you plug in or plug out.

10. Do not let cord hang over edge of table or counter, or touch hot surfaces. Do not use this appliance when the power cord is in a enlacement.

11. Please plug out the plug from the plug base after use.

12. This appliance is for household use only. Do not use outdoor or for commercial use, we will not take any repair responsibility if the user didn't use this appliance according to the manual.

13. When operating the oven keep at least four inches of space on all sides of the oven to allow for adequate air circulation, and the operating platform should be fat and dry. Unplug from

INSTRUCTION MANUAL

outlet when not in use, or before cleaning. Let it to cool before installing or removing parts, or before cleaning.

14. Do not place on or near a hot gas or electric burner, or in a heated oven or in a microwave oven.

15. Do not cover any part of the oven with metal foil.

16. Oversize foods or metal utensils must not be inserted in a toaster oven as they may create a fire or risk of electric shock.

17. Do not place any of the following materials in the oven: cardboard, plastic, paper, or anything similar.

18. Please make sure the appliance is unplug and cool before you want to move or clear it.

19. The use of accessory attachments not recommended may cause hazard or injury.

20. Do not put anything on the oven, especial on the glass door when it's open.

21. Please use tinfoil to en wrap the food which will produce oil or juice when operating and put on the bake tray, in case of a fire.

22. Please make sure the tinfoil unconnected with the heating elements, in case of a fire.

23. Do not move this appliance when it's operating or when it's hot or when it has

INSTRUCTION MANUAL

something inside.

24. Please unplug the oven when you see smudginess come out from the food inside the oven, and do not open the glass door at that time; just open the glass door after the smudginess moved.

25. Do not use appliance if you find any damage or even drop down. Please send it back to the relative repair center for inspection or repair. Do not use the parts which is not from the original manufacturer.

26. This appliance has a tempered safety glass door. The glass is stronger than regular glass and it is more resistant to breakage. Tempered glass can break, but the pieces will not have sharp edges. Avoid scratching the door surface or nicking edges. If the door has a scratch or a nick, contact our consumer relations line before using the oven.

27. For appliance with a type-Y attachment: if the supply cord is damaged, it must be replaced by the manufacturer, its service agent or other similarly qualified person in order to avoid hazard.

28. Rear surface of the appliance should be placed against a wall.

29. The weight of the food that is put on the food

INSTRUCTION MANUAL

tray/wire rack may not exceed 2.5 kg. (Just for reference) (Do not place your food most or all of your food on one side of the food tray/wire rack; rather, distribute the food evenly across the food tray/wire rack).



30. **WARNING:** This appliance has a heating function. Both functional and non-functional surfaces may heat up to high temperatures. Since temperatures are perceived differently by different people, this device should be used with CAUTION. Hold the appliance exclusively by gripping surfaces and use heat protection measures, such as heat protection gloves or potholders. Areas that are not intended to be touched or held must be given sufficient time to cool.

31. Extreme caution must be used when moving an appliance or container containing hot oil or other hot liquids.

32. This appliance is not intended to be operated by means of an external timer or a separate remote-control system.

33. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and

INSTRUCTION MANUAL

knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved

- children shall not play with the appliance
- cleaning and user maintenance shall not be made by children without supervision

34. Children shall not play with the appliance.

35. Cleaning and user maintenance shall not be done by children without supervision.

36. Keep the appliance and its cord out of reach of children younger

37. This appliances is intended to be used in household and similar applications such as:

-staff kitchen areas in shops, offices and others working environments;



-farm houses;

-by clients in hotels, motels and other residential type environments;

-bed and breakfast type environments.

INSTRUCTION MANUAL

Panel display

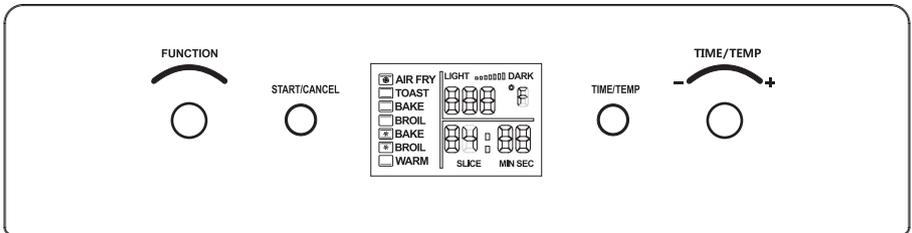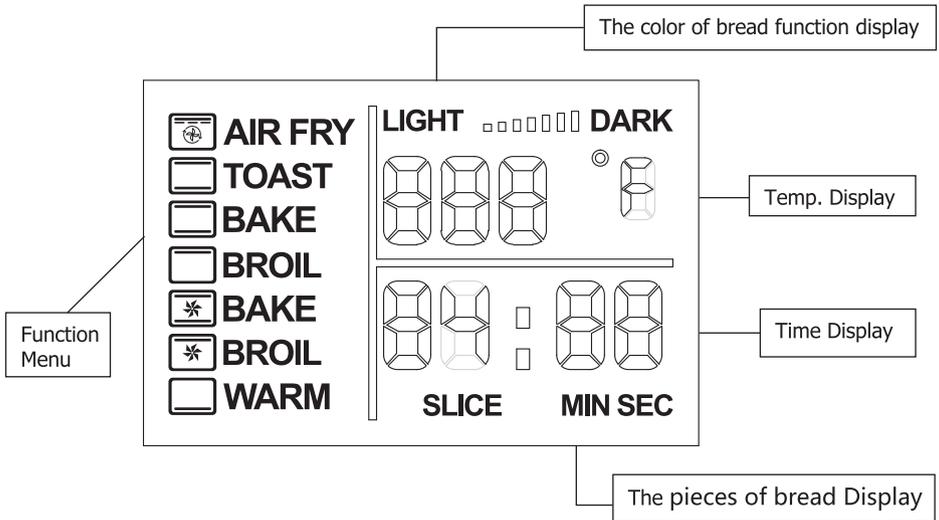

1. Function knob
2. Time /Temp. Knob
3. Wire rack
4. Rotisseries
5. Tray handle
6. Baking tray
7. Basket
8. Crumb tray



INSTRUCTION MANUAL

3

4

5

6



7

8



Default parameters :

The default parameters in each function mode when the oven runs with /without food are as follows :

| Mode | Default Time | Default Temp. | Baking Time | Baking Temp. | Default working status with foods |
|---|------------------|---------------|-------------|--------------|---|
|  AIR FRY | 25Min | 200°C | 1-120 Min | 60-200°C | 4pcs upper heaters+Rotisserie + strong wind |
|  TOAST | 4pcs 4 colors | 230°C | \ | \ | Lower heaters+ upper heaters |
|  BAKE | 25Min | 200°C | 1-120 Min | 60-230°C | Lower heaters+ upper heaters |
|  BROIL | 10Min | 200°C | 1-120 Min | 60-200°C | upper heaters |
|  BAKE | 20Min | 200°C | 1-120min | 60-200°C | Lower heaters+ upper heaters+convection |
|  BROIL | 10Min | 200°C | 1-120 Min | 60-200°C | upper heaters+convection |
|  WARM | 30Min | 60°C | 1-120 Min | \ | Lower heaters |

INSTRUCTION MANUAL

Self-checking function

- Press and hold the "START/CANCEL" key for 3s after the oven is powered up , and the self-checking mode will be automatically started. The software version No. will be shown on the screen, by the program.
- All icons on the screen will be lit for 3s
- All icons on the screen will turn off for 1s
- Display  AIR FRY function ,  AIR FRY function work for 2s
- Display  TOAST function ,  TOAST function work for 2s
- Display  BAKE function ,  BAKE function work for 2s
- Display  BROIL function ,  BROIL function work for 2s
- Display  BAKE function ,  BAKE function work for 2s
- Display  BROIL function ,  BROIL function work for 2s
- Display  WARM function ,  WARM function work for 2s
- The current temperature value will be displayed on the screen for 3s .(if no Temp. Display, the NTC will breakdown)
- The self-checking program finished and the electric oven will return to its original status when it is powered on after the buzzer sounds for 2s .
- The buzzer will stay on continuously in the event of any abnormalities in the self-checking process until the electric oven is powered off .
- In working mode , when any short-circuit / open -circuit is found in temperature sensors , all devices within the system will immediately stop working (except for the illumination lamp.) At the same time , the buzzer will beep 3 times and only "E1/E2" will be displayed on the screen to warn the user .

Operation function:

1、 Key function

- **FUNCTION** : In standby mode , Rotate clockwise or counterclockwise to select the corresponding function, in sequence as follows  AIR FRY、  TOAST 、  BAKE 、  BROIL 、  BAKE 、  BROIL 、  WARM .
- **TIME/TEMP**: After the desired function is selected, Rotate clockwise or counterclockwise to add or subtract temperature adjustment in the default temperature flashing display. Press the "TIME/TEMP", Switch to time flashing state display for time setting. However , some temperatures in the preset menu cannot be adjusted (Please refer to the function's default parameters) The temperature will be increased or decreased by 1 step (5 °C) .
- **START/CANCEL** : In standby mode , when this key is pressed after any function is selected , the system will enter into the working state of the selected function . When this key is pressed in working mode , the system will stop working . In addition , all setting will be canceled if this key is pressed for 3s.
- When the oven is powered on , the time shown on the screen will run from 00 : 00 automatically

INSTRUCTION MANUAL

2、 Specific operation procedures

- The corresponding function icon on the screen will be lit if any function key is pressed and the time shown on the screen will automatically switch to the menu preset time .Rotate clockwise or counterclockwise the "TIME/TEMP" knob to reach setting temperature,then press the "TIME/TEMP"to confirm the temperature setting .Time display will flicker ,then rotate clockwise or counterclockwise the "TIME/TEMP" knob to reach setting time.
- If the consumer is allowed to adjust the temperature and TIME in the working state, press the "START/CANCEL" button, and the temperature on the display screen will be in the blinking state. Rotate the "TIME/TEMP" button clockwise or counterclockwise to adjust the desired temperature, or directly press the "TIME/TEMP" button to enter the TIME setting. TIME display flashing, clockwise or counterclockwise turn "TIME/TEMP" function knob to adjust the TIME.
- If the consumer is allowed to adjust the temperature and TIME in the working state, press the "START/CANCEL" button, and the temperature on the display screen will be in the blinking state. Rotate the "TIME/TEMP" button clockwise or counterclockwise to adjust the desired temperature, or directly press the "TIME/TEMP" button to enter the TIME setting. TIME display flashing, clockwise or counterclockwise turn "TIME/TEMP" function knob to adjust the TIME.
- The default TIME and temperature of TOAST file cannot be adjusted. Display (**LIGHT** □□□□□□ **DARK**) at the end above the temperature display position indicates the TOAST color function, and display the number of slices ( SLICE) at the TIME position. Select TOAST function, the TOAST color file defaults to 4, and rotate the "TIME/TEMP" button clockwise or counterclockwise to adjust the TOAST color function. Press the "TIME/TEMP" key again to switch the number of slices of bread to set the TIME and then START (START/CANCEL) key to work. The maximum temperature on the display screen is 230℃ and the default TIME is displayed.
- After the function selection is completed, press "START/CANCEL" to START the work. If you do not press the "START/CANCEL" key, the above design will automatically become invalid after 1min, and the time will be switched back to the clock display state
- If the function key is not selected but another key is pressed first, there will be no other valid response and the clock display will not change to the preset time display of the function menu;
- If the above selection and adjustment actions are not available, the time will be switched back to the clock display state after 1min;
- In the process of function selection and setting in standby state, if the machine has internal lighting, the internal lighting will not be on.
- When selecting a function shift, the selected shift blinks, while other function shifts are not displayed.

CLEANING INSTRUCTIONS

CAUTION: To protect against electrical shock, **DO NOT IMMERS**E THE OVEN IN WATER OR ANY OTHER LIQUIDS.

INSTRUCTION MANUAL

For best performance and a long life, clean your toaster oven regularly. Regular cleaning will also reduce the risk of fire hazard.

1. Remove plug from electrical outlet. Allow it to cool.
2. Remove the Removable Crumb Tray, Rack, and Tray by pulling them out of the oven. Clean them with damp soapy cloth. Make sure to only use mild soapy water.
3. To clean the inside of oven, wipe the oven walls, bottom of the oven, and glass door with a damp, soapy cloth. Repeat with a dry, clean cloth.
4. Wipe the outside of the oven with a damp cloth. **CAUTION: DO NOT USE ABRASIVE CLEANERS OR METAL SCOURING PADS.** Make sure to only use mild soapy water. Abrasive cleaners, scrubbing brushes and chemical cleaners will damage the coating on this unit. Pieces can break off the coating and touch electrical parts, which in turn could result in a risk of electrical shock.
5. Allow the appliance to cool and dry completely before storing. If storing the oven for long periods of time, make sure that the oven is clean and free of food particles. Store the oven in a dry location such as on a table or countertop or cupboard shelf. Other than the recommended cleaning, no further user maintenance should be necessary.
6. Any other servicing should be performed by an authorized service representative.

TO STORE

Unplug the unit, allow it to cool, and clean it before storing. Store the electric oven in its box in a clean and dry place. Never store appliance while it is hot or still plugged in. Never wrap cord tightly around the appliance. Do not put any stress on the cord where it enters the unit, as this could cause the cord to fray and break.

IMPORTANT:

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a responsible for their safety.

The children have to observe and watched not to play with the appliance.

Correct Disposal of this product



This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use thereturn and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.