 


	1	2	3	4
A	8E109080X			
B	后附图纸10页			
C	技术要求 1.材料：80g双胶纸，正反面印刷； 2.印刷为黑白色单色印刷； 3.所有印刷内容正确、清晰，不得有漏印、误印，无印刷缺陷； 4.幅面：（210±3）X（145±3），（单位：mm）； 5.未注公差按照GB1800(现行).IT15； 6.颜色及整体效果必须经过研发部确认后方能生产，产品检验以封样件为准； 7.符合RoHS现行标准要求和REACH指令。			
D				
1886746 南非 WTCT802				
借(通)用件登记				
旧底图总号				
底图总号				
	版本号	A	更改单编号	
出图审查	设计	马汇苑 2016.07.22	会签	
	审核	崔维明 2016.07.22	会签	
日期	工艺	王云峰 2016.07.22		
	标准化	程木聪 2016.07.22	批准	薛秀超2016.07.22
1	2		3	4

80g双胶纸	洗衣机研发部	
	使用说明书	
	X08060138	

重量	比例
第 1 张 共 11 张	
图形识别符号 	

Hisense

Hisense

USER'S OPERATION MANUAL

WTCT802

Hisense

X08060138A

Before operating this unit, please read this manual thoroughly,
and retain for future reference

Trouble shooting

Displayed error code	Issue	Solution
E1	Lid is not closed.	Make sure lid is closed properly. Open and close lid, then press "Start/Pause" to continue the process. The error code will clear once the lid has been closed properly.
b1, b2	Washing machine is running a load balance in process.	Load balancing in process, water will fill and spin cycle will commence once done.
UN	If balancing is not corrected after the second time, please distribute and balance load manually.	Open the lid, lay the clothes flat manually, then close the lid and press "Start/Pause" to continue the process.
E3	Washing machine takes too long to drain. Water has not drained from washer after 8 minutes.	Check that drain hose is installed correctly, not frozen, or clogged. See "Usage of the drain hose". Open and close lid, then press "Start/Pause" to continue the process.
E4	Washing machine takes too long to fill.	Check the inlet hose installation, open and close lid, also check whether the tap is open and the water pressure is not too low. Then press "Start/Pause" to continue the process.
E5	Water level sensor is broken.	Please contact Hisense service department.
E8	Reach the overflow water level.	In case of overflow alarm in the first two times, automatically drain water below the set water level so as to eliminate alarms; For the third time, it is necessary to eliminate through manual shutdown.
Attention	Error continues	If the problem persists please contact Hisense service department. Repairs should be done by qualified technician.

Contents

Specifications.....	1
Safety precautions	2-5
Parts included.....	6
Packing list	6
Installation and adjustment.....	7
Installation of the inlet hose.....	8
Preparation before washing.....	9
Loading laundry and dispensing the detergent.	10
Programs and options.....	11-13
Wash programs.....	14
Disposal after washing.....	15
Trouble shooting.....	16

Specifications

Type	Automatic Washing Machine
Model	WTCT802
Rated voltage frequency	220-240V ~ /50Hz
Rated washing/spinning capacity	8.0kg
Water inlet pressure	0.02MPa-0.8MPa
Rated input power	360W
Weight(Net)	32 kg
Dimensions(mm)(W×D×H)	532×532×920

Safety precautions

Your safety and the safety of others are very important.

We have provided many safety messages in this manual and on your appliance. Always read and obey all safety messages.



This is the safety alert symbol.

This symbol alerts you to potential hazards that can kill or hurt you and others.

All safety messages will follow the safety alert symbol and either the word "DANGER" or "WARNING". These words mean:

⚠ DANGER

You can be killed or seriously injured if you don't immediately follow instructions.

⚠ WARNING

You can be killed or seriously injured if you don't follow instructions.

All safety messages will tell you what the potential hazard is, tell you how to reduce the chance of injury, and tell you what can happen if the instructions are not followed.

IMPORTANT SAFETY INSTRUCTIONS

WARNING: To reduce the risk of fire, electric shock or injury to persons when using your washing machine, follow basic precautions, including the following:

- Do not remove the ground wire.
- Plug into a grounded outlet.
- Do not use extension cords.
- Unplug or disconnect power before cleaning or servicing.
- After cleaning or service, replace all parts and panels before operating.
- Use non-flammable cleaning products.
- Keep flammable products, such as gasoline, away from washing machine.
- Use two or more people to move or install washing machine.
- Do not repair or replace any part of the washing machine or attempt any servicing unless specifically recommended in this manual.
- For service, contact the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.


Disposal after washing

If the cabinet is dirty, wipe it with damp soft cloth.

- Do not wash with water directly.
- Wipe with neutral detergent.
- Do not wipe with thinner, petrol, alcohol etc.




The filter is likely to be blocked by foreign materials and influences water inlet. Please clean it with brush frequently.

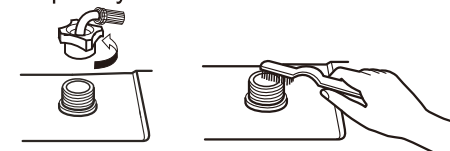


Use filter during washing to collect thread residue and wool dregs. Clean immediately after every use as follows:

1. Press down buckles to pull out filter cover

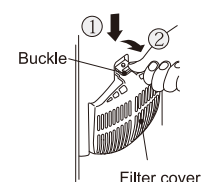


2. Take filter net from cover

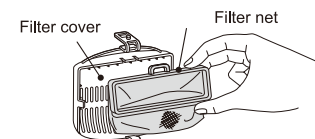

3. Clean net




4. Reinstall net

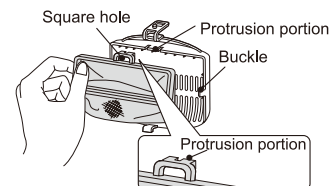

Press net to protrusion portion on shell from square hole and then align buckles at left and right.

5. Reinstall cover

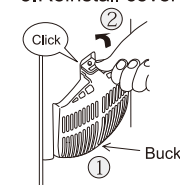

- ① Insert lower buckle on shell into filter plate.
- ② Press shell in until a "click" is heard.

◆ The filter can be replaced once it becomes worn.

1. After washing, close the water faucet. (If needed, inlet hose can be disconnected from the tap after ensuring that the tap has been closed properly).
2. Ensure that the water is drained from the machine after every use.
3. Be sure to pull off the power plug before maintenance.
4. Hang up the power cord and drain hose.
5. Wipe off the water drops on the surface of the washing machine and inside the tub. Open the top lid for some time (about 1 hour), then close the top lid.

Wash programs

Fully Automatic Program

Wash Program	*Wash time (minutes)	Rinse (times)	*Spin time (minutes)	Purpose of Application
Fuzzy	13	2	6	Fuzzy logic can be used for moderate to very heavy duty washing
Quick	4	1	3	Use this function for slightly soiled garments.
Delicate	11	2	4	Silk and delicate clothing ,dresses skirts,shirts and blouses.
Wool	10	2	4	The wool fabrics with pure wool mark yet available for machine washing.
Jeans	13	2	6	Wash the denim-type fabrics.
Eco	8	2	5	Use for lightly soiled fabrics.
Heavy	14	2	6	Wash the intensively dirty or large-size fabrics.
Memory	13	2	6	Memorizes your preferred settings.
Tub Clean	6	0	7	Clean the drum of the machine which can be soiled due to residue build up.

- wash and spin time are designed in the certain program.

Program	Soak	Wash	Rinse	Spin
Predetermined washing process	●	●	●	●
Complete program		●	●	●
Wash only		●		
Spin only				●
Wash + Rinse		●	●	
Rinse + Spin			●	●

As shown by the light of the display:

- (Flashing light) indicates the current process.
- (Flashing light+audible alarm): indicates the operation failed due to an error.

Safety precautions

⚠ SAFETY WARNING

Safety Warning

1. Do not place heavy objects on washer.
2. Use two or more people to move or install washing machine.
3. Water temperatures should not exceed 55°C.
4. Washing machine should be plugged into a matching outlet.
5. Do not allow children to play on or in the washer.
6. If power cord is damaged, it must be replaced by the manufacturer or its service agent or similarly qualified person.
7. The new hose-sets supplied with the appliance are to be used and that old hose-sets should not be reused.

Risk of Clothing Damage

1. Do not wash waterproof clothing (raincoats, pillows, sleeping bags).
2. Washer is for domestic use only.
3. Always read and follow fabric care labels instructions to avoid damage to your garments.

Explosive Damage

1. Do not wash articles that have been previously cleaned in, washed in, soaked in, or spotted with gas, dry-cleaning solvents or other flammable or explosive substances.
2. Do not operate washer if there is a gas leak.

Risk of Injury

1. Keep packaging materials away from children.
2. The appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
3. Do not allow children to play with washing machine.
4. Do not reach into the washing machine if the drum, or agitator is moving.

⚠ WARNING



Electric Shock Hazard

- Connect to a grounded outlet.
Do not remove ground.
Do not use adapters except those certified and provided by the manufacturer.
Do not use an extension cord.
Failure to follow these instructions can result in death, fire, or electric shock.

⚠ WARNING



Risk of Fire

- Do not wash items that have been dampened with gasoline, or any product that releases vapors or gases that can ignite and explode.
Failure to follow these instructions can result in death or fire.


Safety precautions

Meaning and description of the symbols

Warning mark 	Contents marked with that symbol are related to the safety of the product and the personal safety of the users. Failure to comply with the instruction could cause damage of the machine or injure the personal safety of the user.
Forbidding mark 	Contents marked with that symbol are actions forbidden to perform. Failure to comply with the instruction could result in damage of the machine or injure the personal safety of the user.

We have provided many important safety messages in this manual and on your appliance. Always read and obey all safety messages.


Washing machine should be plugged into a matching outlet. Be sure to use three-phase power receptacle. Ensure that the earthing prong of the power receptacle is earthed reliably. Use leakage protector if possible.

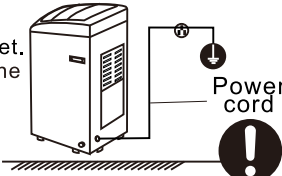

In normal usage of the washing machine, the power plug shall be ready to be disconnected or plugged with hand. Be sure to disconnect the plug and close the water faucet in following cases: power failure, delivering the washer, setting the Washing machine idle or cleaning the washer. Do not plug or pull the power plug with wet hand. Do not use an extension cord.



Do not bend, stretch, twist, bind the power cord by force, or reform it. Do not press or clamp it with heavy items. If the power cord and power plug are damaged, or the receptacle is loose, be sure to have it replaced by the technicians of our special shop or our agent, or Hisense service department for the sake of avoiding any risk. Keep the prong of the power plug clean. If dust is found on the power plug, please wipe it off with dry cloth.

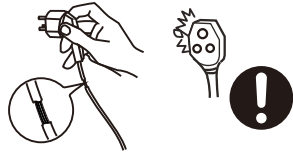


Do not let the washing machine share one receptacle with other electric appliances. If the power plug is damaged, or the connection into the power inlet is loose, do not use it any more.



Programs and Options



7. Press Delay to set delay time from 0 - 24 hours. Each press of the button will change the time in 1 hour increments. If time is shorter than the wash cycle, press Start/Pause to start the cycle. The set wash time is displayed in hours, indicated by "--". The cycle will end at the selected time. After setting the delay, press Start/Pause. The washer will enter standby mode. After 10 seconds, the delay indicator will count down, then all other indicator lights will return to normal. Due to water flow rates, the actual wash time may differ somewhat from the set time.

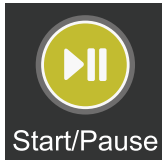


8. Press Start/Pause to start washing machine. Pressing Start/Pause again will pause washer at any stage in the wash process.

IMPORTANT
A signal will sound at the end of the wash cycle and the washing machine will turn off automatically.

9. Child Lock:
- At any time before or during a wash cycle, you may lock the controls by pressing Function and Process for 3 seconds. You can unlock the panel by the same way. The Child Lock will automatically turn off when the program finish.
 - After the child lock is set, if the lid opening time exceeds 5s, the washing machine will start the drainage protection procedure. During drainage, close the lid and press the Start/Pause button, then the drainage will stop and the previous program will proceed, otherwise, the water drainage will go on until the tub is empty with buzzing alarm. The child lock will remain in force after fault elimination.


NOTE: The Child lock will automatically turn off if the washing machine has a functional error. The lock will be restored when the error is corrected.

Programs and Options

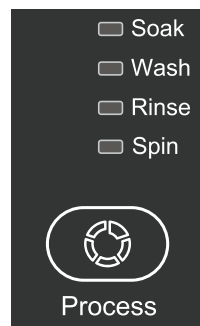


4. In the standby state, when pressing the Process button, the combined washing process will cycle as follows:

- Wash+Rinse+Spin
- Soak+Wash+Rinse+Spin
- Wash only
- Wash+Rinse
- Rinse+Spin
- Spin only

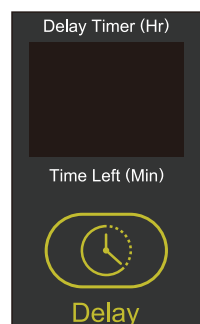

5. Press the Delay button, the delay time increases by one hour. When the washer is started, the Delay Timer (Hr) decreases by one hour. If Delay button is not pressed, the Remaining Time(Min) decreases by one minute.

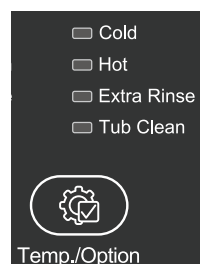

6. Press Temp/Option button repeatedly to cycle through the water temperature, extra rinse and tub clean.

Cold > Cold, Extra Rinse > Cold, Hot > Cold, Hot, Extra Rinse > Hot > Hot, Extra Rinse > Cold, Hot, Tub Clean

Safety precautions


Do not place the washing machine in a humid or damp environment like a bathroom. Do not use corrosive cleaning products to clean the washer. Use only a soft damp cloth.



Do not use water with temperature higher than 55°C inside the tub.



Do not position the washing machine on a Carpet.

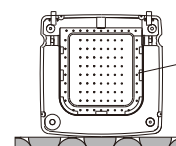

Do not wash water-proof laundries like the raincoat, bike covers, down textiles etc. to avoid abnormal vibrations in spinning and damaging the laundries.



Do not put hand into the rotating tub. It is dangerous even if the rotation speed is slow. Take special care of the children. Keep children away from the washing machine to avoid them climbing on it.



Do not decompose, repair or alter the machine by yourself.



 
Do not put any hot or heavy items(such as the kettle with hot water)on the washing machine.



Do not wash laundries with volatile materials (such as thinner, petrol etc.).



The handicapped or children shall not use the washing machine without care.




Keep the washing machine away from direct sunlight and heat source like the heater.



Parts included



Packing list

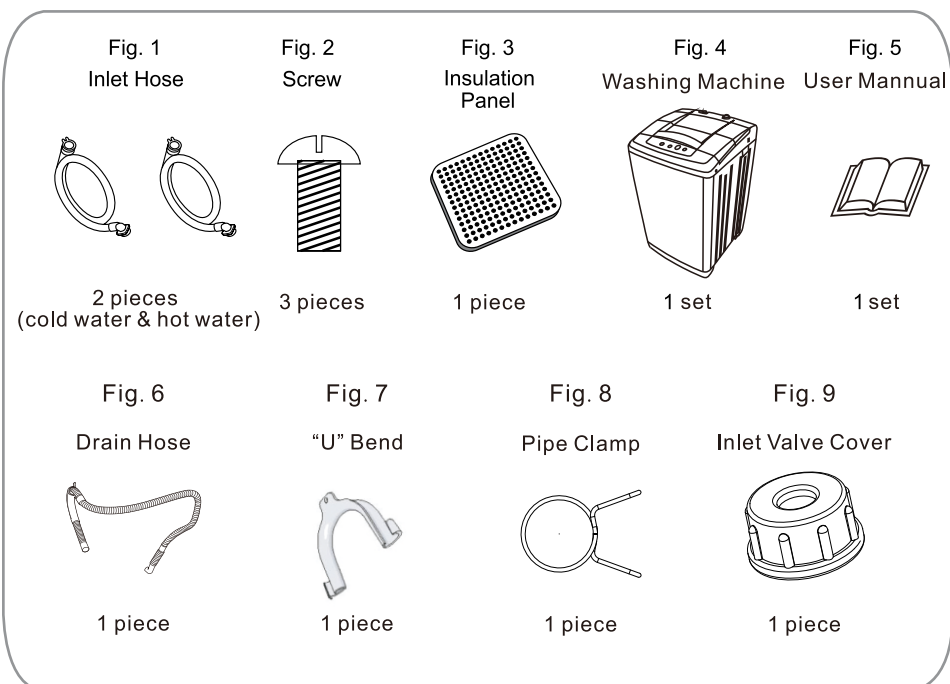


Programs and Options

Follow the steps below to program the washing machine according to your needs:


The states and meaning of lights

- The light lighting up indicates the progress of wash program selected.
- The flashing display light indicates the progress of wash.

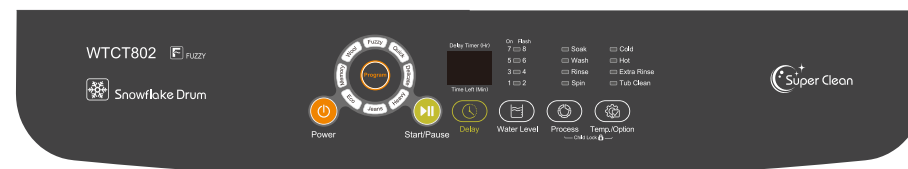

1. Press Power button to turn on the washing machine. Press Power button again to turn washing machine off.

- The washing machine will automatically stop after completion of wash program.
- The washing machine will be in fuzzy logic status when you press the Start operating. Self-checking, setting the water level and completing the washing machine washing process. If you press any other buttons, the washing machine will automatically quit the fuzzy logic mode and enters into manual control mode; if you do not press any buttons, the washing machine will shut off automatically after 10 minutes.

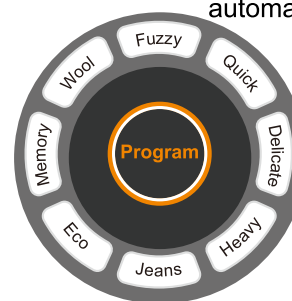

2. Select Wash Program based on fabric, soil level, and load size.

- Fuzzy - Use for normally soiled textiles.
- Heavy - Use for washable synthetic fabrics.
- Delicate - Use for silk and delicate clothing.
- Wool - Use for washable wool or delicate fabrics.
- Quick - Use for washable cotton, polyester, polyamide.
- Jeans- Use for denim-type fabrics.
- Eco- Use for lightly soiled fabrics.
- Memory- Memorizes the users' washing habits.



3. To manually select the washing machine level, press Water Level. The indicator will light up for 1,3,5,7 and flash for 2,4,6,8.

Put in the laundries and add the detergent

How to load the laundry and add detergent

- The capacity of washing and spinning refer to the largest weight of the standard laundry under dry condition that can be washed or spined in one cycle. Washing quantity for one cycle shall be less than the rated capacity. The largest capacity of this machine is 8.0kg.
- The thickness, size and type of the cloth will influence the actual washing capacity. It is feasible to put in suitable amount of laundry and the laundry can be tumbled normally in washing for one cycle.
- Please do not select high water level for laundry less than 2.0kg to avoid splashing.
- In washing the fluffy laundry like the woolen blanket, the quantity shall not exceed 2.0 kg for each cycle.
- In using water with high temperature, please pay attention to the washing temperature limit stated on the label of the laundry.

Add the detergent



- When the Delay wash is chosen, open the detergent box completely and put the washing powder into the box. Keep the box open during the wash process, then close it when the wash process finish.
- The washing powder can be added into the tub directly when the Delay wash is not chosen.

How to use the washing powder

- Directly dissolved in the machine (Not applicable for Fuzzy program and Delay wash):
 1. Fill in small quantity of water.
 2. Add the washing powder. Run for 30 seconds to dissolve it completely.
 3. Put in the laundry. Select suitable water level.
- The instant dissolving of the washing powder:
 1. Prepare warm water of 30°C and a container.
 2. Add the powder into the container while stirring to fully dissolve it.
- The powder is more likely to pollute the laundries than the detergent. Therefore please use it with suitable quantity.
- It is suggested not to use high foam detergent. Use detergent for top loaders or automatic machines only
- Washing powder with poor quality or long time storage may be caked. Please clean the detergent box in time.

Standard dosage of the detergent and water quantity

laundry quantity(kg)	Water level	Water quantity	Common powder, Add 1.3g in each 1L water
6.0-8.0(wool1.0-2.0)	8 7	About 58L About 54L	About 75.4g About 70.2g
4.0-6.0(wool 0-1.0)	6 5	About 48L About 42L	About 62.4g About 54.6g
2.0-4.0	4 3	About 39L About 34L	About 50.7g About 44.2g
0 - 2.0	2 1	About 29L About 23L	About 37.7g About 29.9g


Installation and adjustment

Please install and adjust the machine according to the requirement of the manual, which is very important for you to operate the machine safely and properly.

- Remove the packaging, take out the Insulation panel, the EPS Base, the insert, etc..
- Open the lid of the washing machine, take out the Accessories in the tub of the washing machine.


Note:

The insert in the EPS Base is not a part of the washing machine, it's usage is fixing the washing machine in the transportation. Test the washing machine or washing on the EPS Base is strictly prohibited.

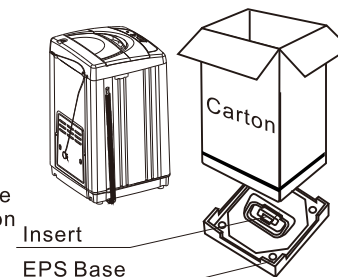

Install the Insulation panel

- After opening the package, please lean the washing machine forward gently, then put the insulation panel into the socket of the Base.
- Fasten the insulation panel to the Base with a screw by a cross screwdriver.

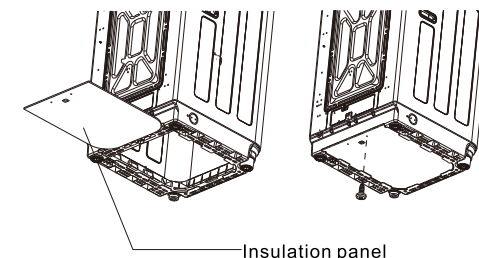


Adjust the installation position

The largest allowable slope of the shank base of the machine is 2°. The slanting or rough ground will result in unstable running or stoppage of the machine. Please adjust it with following methods:

● Confirm it's horizontal:

Use a thread tied with plumb to check if it is horizontal.

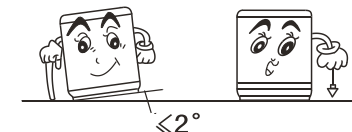

● Adjust the adjustable foot

1. To twist the adjustable foot, please first lift up the side of the foot slightly. Twist the adjustable foot clockwise until the washing machine is stable.
2. Fasten the not counter clockwise after adjustment.



Installation of the inlet hose

Confirm the suitable faucet and water requirement

An adequate water supply must be provided with water pressure between 0.02MPa to 0.8MPa. For proper operations the water temperatures must be between 5°C and 55°C . Length of front end must be greater than 10mm. Use of a horizontal faucet with a right angle opening is recommended.




1. Attach the inlet hose to the water faucet, and the other end of the inlet hose to the washing machine.
2. Check that the connection is secure.
3. Check that the water supply hoses are not bent or tangled. Turn on water faucets to check for leaks connection.
4. Insert the other end of the drain hose into a sink, laundry tub, or a drain pipe with a diameter of 5 cm.



Notice:


Do not remove absorbing pad and check if it falls off or be damaged or not every time washing machine is going to be used. If yes, contact Hisense service department immediately.

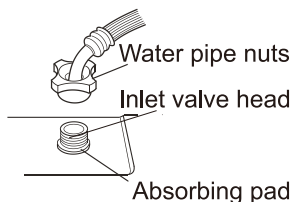

Preparation before washing

Preparation before washing

1. Open the water faucet.
2. Confirm that the washing machine is earthed reliably. Then plug the power plug into the receptacle, the earthing terminal shall not link to gas pipeline and faucet water pipeline.

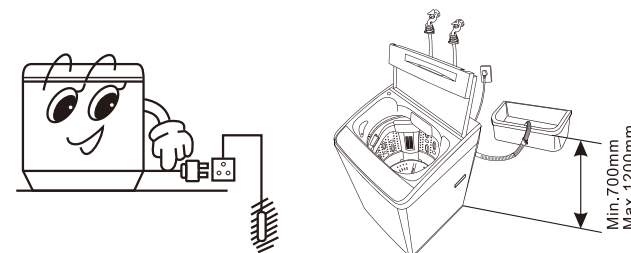

Pay attention to followings before washing

Check if the laundry has special washing requirement.

Clear all pockets of loose items, this may damage the machine if not removed.

Tie the long strips; fasten the buttons; close zippers.

The quantity of the laundry shall not be too large. Stretch and loosen the laundry before putting them in the tub.

It is advisable to add laundry with buttons to a slope as the buttons could cause a rattling sound whilst being washed.



- a. Check if the laundry are applicable for washing.
- b. Divide the laundry that are not colorfast from other laundry.
- c. Put those laundry difficult to absorb water into water with hand.
- d. For those laundry with heavy soil, please first remove the dirt like mud or dust. For the parts with heavy soil, please apply detergent on them in advance, which can make it easier to remove the soil.
- e. For those laundry that may get lint ball and those with long fur, turn it over before putting in.
- f. Do not put those laundry polluted by chemicals into the washer directly.